




Electrak[®]

GEZ-5824

Tractor

INSTRUCTIONS

Model AG54 Cab

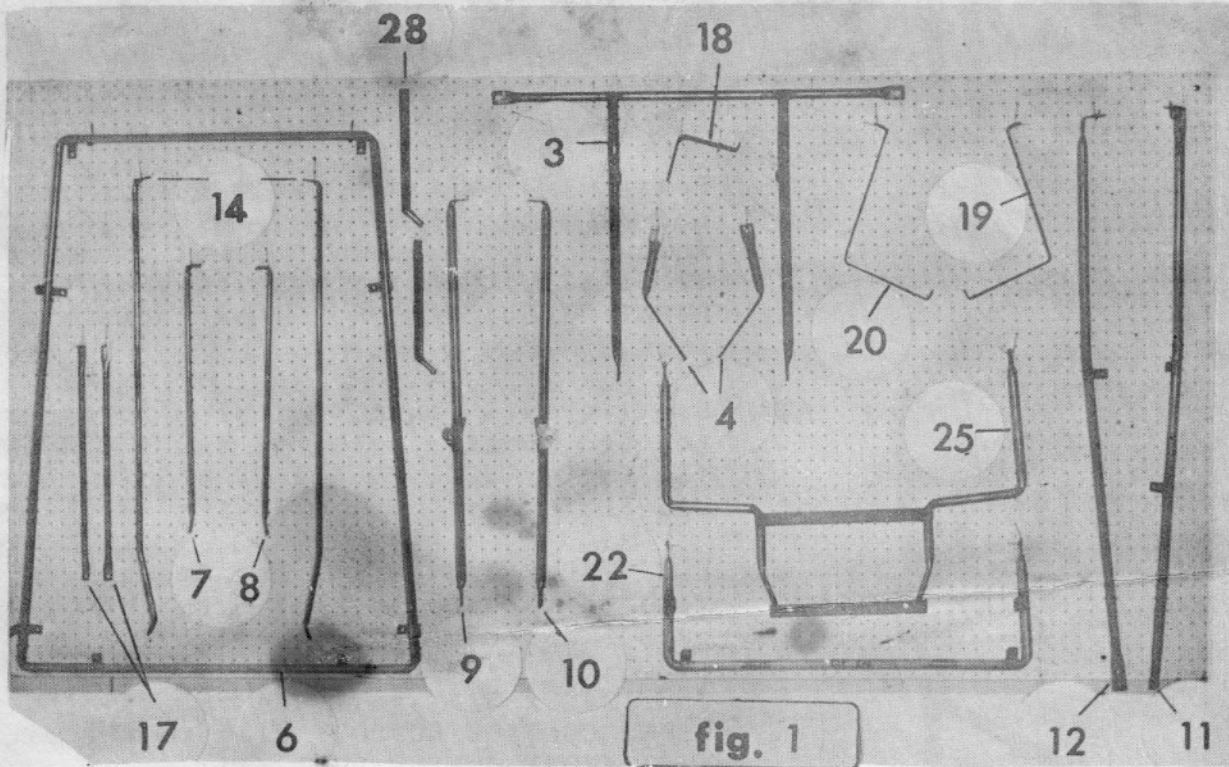

ASSEMBLY

FOR CAB MODEL AG54
 DESIGNED FOR GE
 ELEC-TRAK TRACTOR
 MODELS E8M, E8HM, & E10M

STEP 1: SEE FIG. 1

Lay out all metal parts in arrangement shown above.




Electrak[®]



Tractor



STEP 2:

SEE FIGS. 2, 3, and 4:

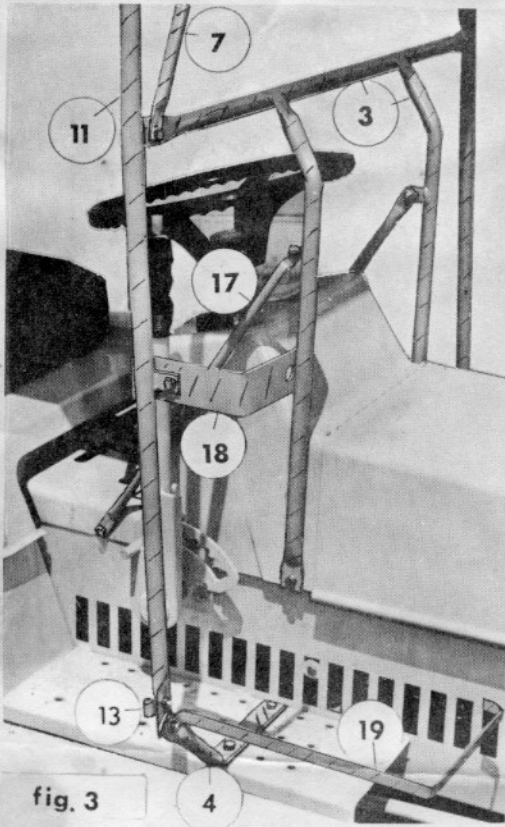

- A. Attach FEET (4) to top side of tractor foot rest, using $5/16''$ x $3/4''$ bolts.
- B. Attach FRONT PANEL FRAME (3) and FRONT PANEL FRAME BRACES (17) to tractor using existing tractor bolts. Use $1/4''$ x $3/4''$ bolts and nuts to fasten together the two braces (17) and the FRONT PANEL FRAME (3).
- C. Pass a $1/4''$ x $1\ 1/4''$ bolt through lower end of each TOP BRACE (7 & 8), then through clip welded to FRONT CORNER POSTS (11 & 12), then through outer ends of FRONT PANEL FRAME (3). Add nuts and snug them.
- D. Use $1/4''$ x $1''$ bolt to fasten together bottom end (bottom hole) of FRONT CORNER POSTS (11 & 12), FOOT POCKET GUARDS (19 & 20), and FEET (4).
- E. Use $1/4''$ x $3/4''$ bolts to attach DOOR HINGE (13) to the second hole from the bottom of each FRONT CORNER POST (11 & 12).
- F. Use $1/4''$ x $3/4''$ bolt and nut to attach CHUTE CONTROL SUPPORT (18) to the right hand FRONT CORNER POST (11).

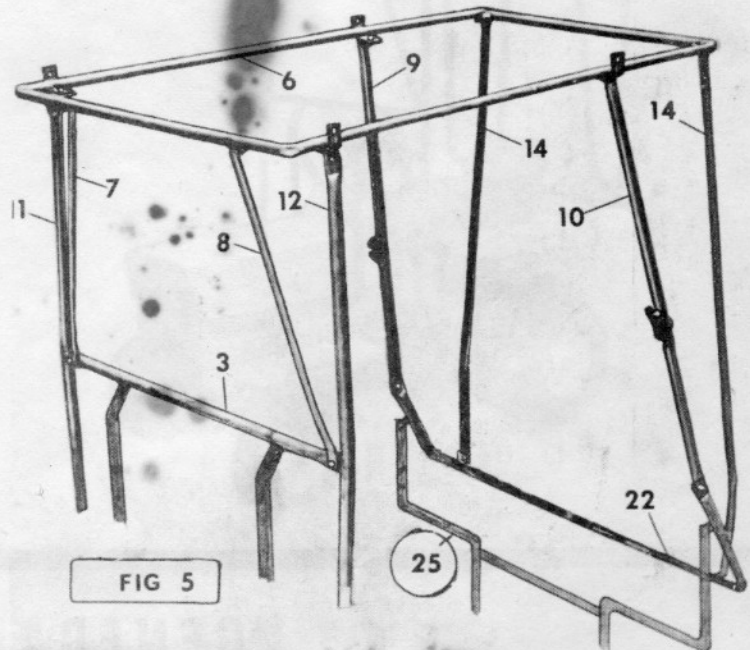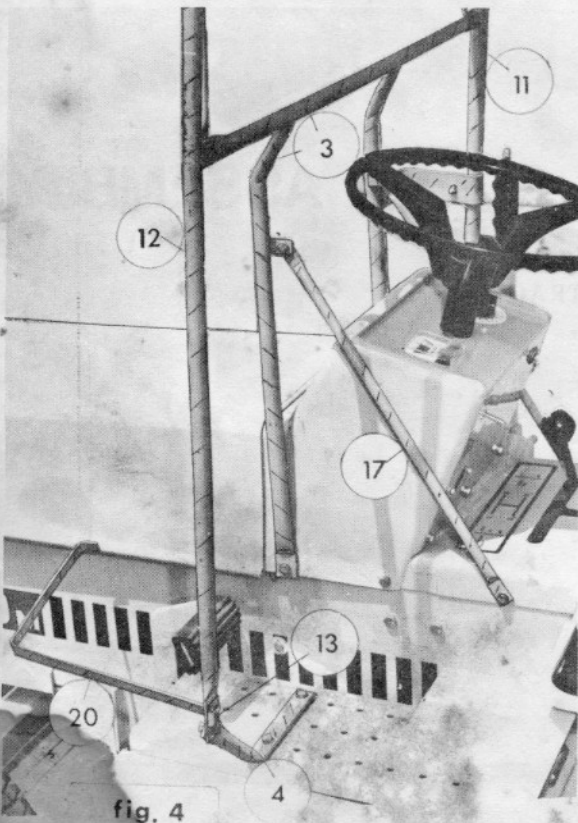

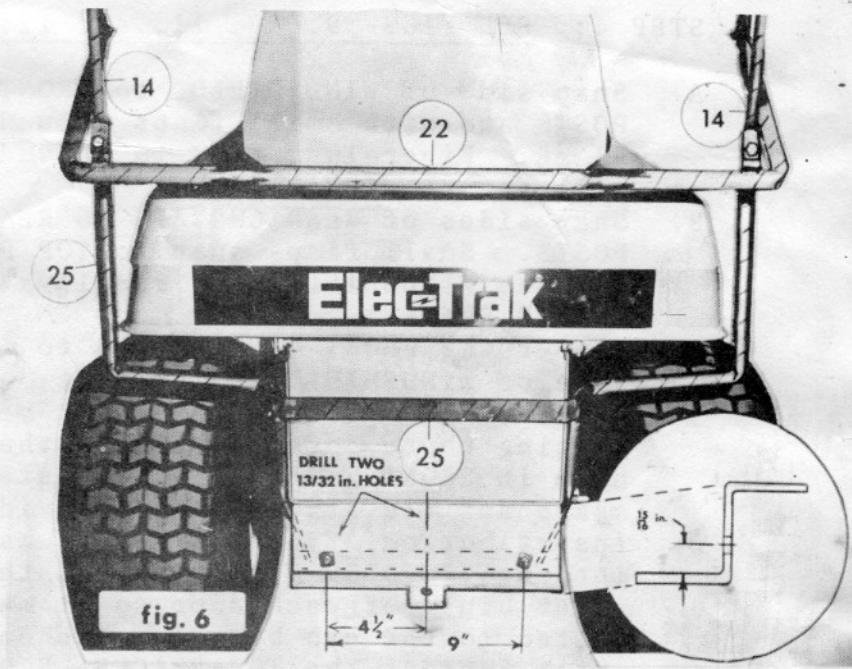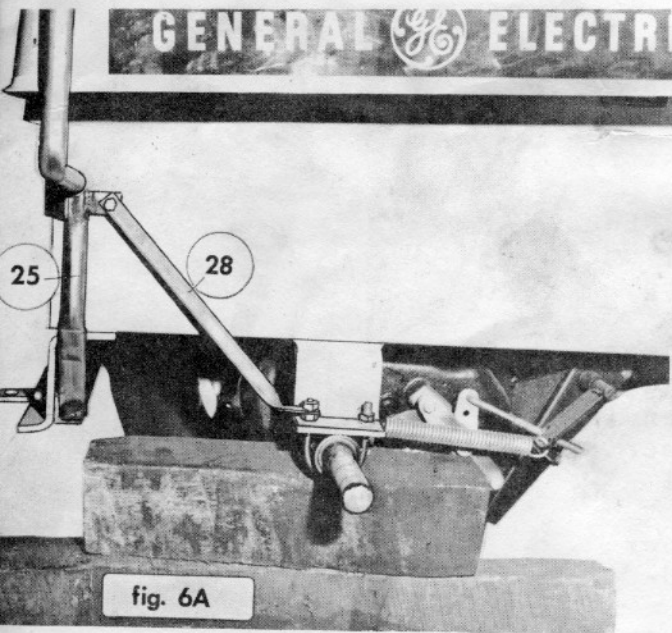

ASSEMBLY INSTRUCTIONS (continued)

STEP 3: SEE FIGS. 6, 6A, and 7:

A. Drill two 13/32" holes in vertical face of rear hitch plate, as shown dimensioned in FIG. 6. The holes are to be 9" apart, and 15/16" above the bottom surface of this plate.

B. Use 3/8" x 3/4" bolts and nuts to attach REAR ATTACHING BRACKET (25) to tractor.


C. Use 1/4" x 3/4" bolts and nuts to attach REAR CROSS BAR (22) to REAR ATTACHING BRACKET (25).

D. REFER TO FIG. 6A, then using 1/4" x 3/4" bolts and nuts attach REAR ATTACHING BRACKET BRACE (28) to each side of REAR ATTACHING BRACKET (25), then attach BRACE (28) to REAR AXLE "U" CLAMP of tractor and add 5/16" nut and tighten.

E. Use 1/4" x 3/4" bolts and nuts to attach REAR CURTAIN BOXING POSTS (14) and REAR CORNER POSTS (9 & 10), to REAR CROSS BAR (22). Note that the REAR CORNER POSTS (9 & 10) will have the door latches toward the front of the tractor, while the bent, upper ends point toward each other (inward). Tighten bolts enough to hold in an upright position.

SEE FIG. 5:

F. Use eight (8) 1/4" x 3/4" bolts to attach TOP FRAME (6) to all eight (8) upright parts.

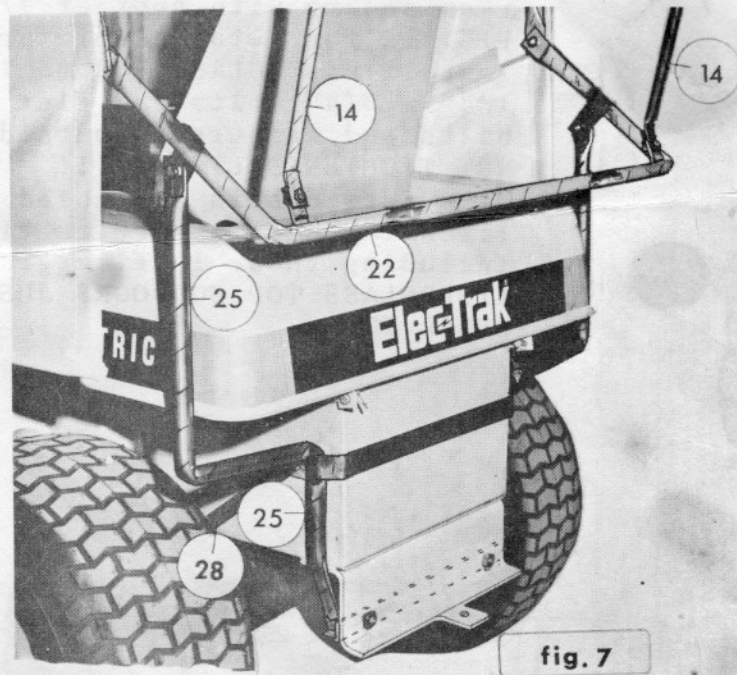

STEP 4: SEE FIGS. 9, 10, 11, and 12:

- A. Snap side of WINDSHIELD to FRONT CORNER POSTS and with small flaps around TOP FRAME. Fiberglass top, to be added later, will secure windshield.
- B. Snap sides of REAR CURTAIN to REAR CORNER POSTS. Small flaps snap to TOP FRAME, same as WINDSHIELD, and rod lays on top of TOP FRAME.
- C. Zipper the FRONT PANEL VINYL to the lower edge of WINDSHIELD and snap it, also, around FRONT CORNER POSTS. Care must be taken in fitting chute control through the proper hole in FRONT PANEL VINYL. Fasten all snaps and tie straps where provided.
- D. Insert bottom, front corner of each door into bottom DOOR HINGE, adjust the mid-point hinge of each door so it may be bolted to the cab by using the same bolt which fastens the TOP BRACES, FRONT PANEL FRAME, and FRONT CORNER POSTS together, then secure with another 1/4" nut. (SEE FIG. 12 for detailed picture.)
- E. Install FIBERGLASS TOP to TOP FRAME by using 1/4" x 3/4" bolts and flat washers (head of bolts and washers to outside of top). DO NOT TIGHTEN BOLTS YET!!!
- F. Make sure cab is assembled so doors will latch. NOW make sure to tighten all bolts, including those in fiberglass top. Adjust FIBERGLASS TOP SO DOORS JUST WILL CLOSE UNDER IT.



fig. 9



fig. 10

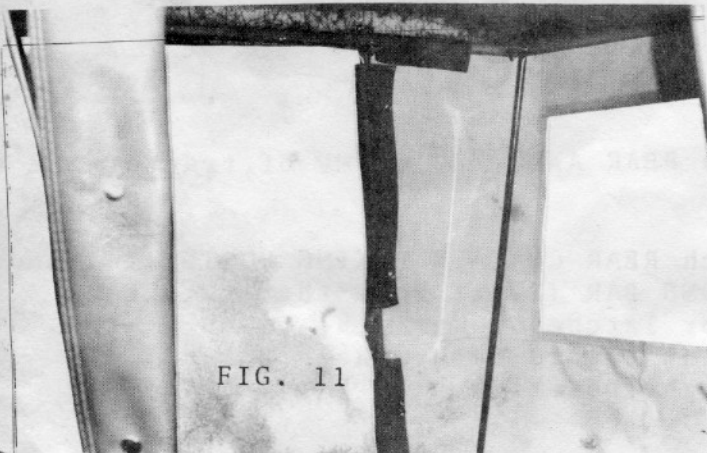


FIG. 11

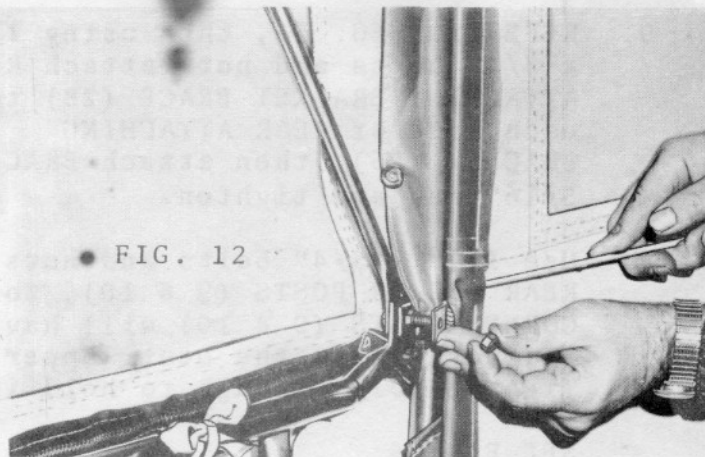


FIG. 12

Hardtop/vinyl Cab for models E8M, E8HM, and E10M

PARTS

KEY NO.	QTY.	PART NO.	PART NAME
1	1	6335	WINDSHIELD (plastic)
3	1	6327	FRONT PANEL FRAME
4	2	6326	FOOT, right and left hand
6	1	5648	TOP FRAME (large)
7	1	5630	TOP BRACE, right hand
8	1	5631	TOP BRACE, left hand
9	1	3071	REAR CORNER POST, right hand
10	1	3072	REAR CORNER POST, left hand
11	1	6325	FRONT CORNER POST, Right hand (special, bent)
12	1	2506	FRONT CORNER POST, Left hand
14	2	6333	REAR CURTAIN BOXING POST, right & left hand (spcl)
16	1	5551	FIBERGLASS TOP (large, white)
17	2	6330	FRONT BRACE, right and left hand
18	1	6340	CHUTE CONTROL SUPPORT
19	1	6328	FOOT POCKET GUARD, right hand
20	1	6329	FOOT POCKET GUARD, left hand
21	1	6334	FRONT PANEL, vinyl
22	1	6331	REAR CROSS BAR
23	1	6336	DOOR, right hand
24	1	6337	DOOR, left hand
25	.	6332	REAR ATTACHING BRACKET
27	1	6338	REAR CURTAIN, vinyl
28	2	6376	REAR ATTACHING BRACKET BRACE
	1	6339	PARTS BAG (contents listed below)
13	4	15	DOOR HINGE
	34	730	1/4"-20 NUT, lock
	6	729	5/16"-18 NUT, lock
	4	784	5/16"-18 x 3/4" CAPSCREW, hex
27	788	788	1/4"-20 x 3/4" CAPSCREW, hex
	2	783	3/8"-16 x 3/4" CAPSCREW, hex
	2	790	3/8"-16 NUT, lock
	2	926	1/4"-20 x 1" CAPSCREW, hex
	2	2186	1/4"-20 x 1 1/4" CAPSCREW, hex
	4	3951	1/4" FLAT WASHER, S.A.E.

General Electric Company
 Outdoor Power Equipment Operation
 Corporations Park, Bldg. 702
 Schenectady, N.Y. 12345

GENERAL  ELECTRIC

MADE IN U.S.A.