



Parts Catalog

**John Deere
Electric 90 and 96 Mowers**

PC-1279



JOHN DEERE SERVICE PUBLICATIONS REPORT

For your convenience,
three postage-paid mailing
cards are provided to re-
port an error or convey a
suggestion relative to
John Deere Service
Publications.



Publication No. _____ Pub. Date _____ Page _____

Machine _____ ☐ Report of Error ☐ Suggestion

Name _____ Company _____

Address _____

City and State _____ Date _____

JOHN DEERE SERVICE PUBLICATIONS REPORT

Publication No. _____ Pub. Date _____ Page _____

Machine _____ ☐ Report of Error ☐ Suggestion

Name _____ Company _____

Address _____

City and State _____ Date _____

JOHN DEERE SERVICE PUBLICATIONS REPORT

Publication No. _____ Pub. Date _____ Page _____

Machine _____ ☐ Report of Error ☐ Suggestion

Name _____ Company _____

Address _____

City and State _____ Date _____

Postage
Will be Paid
by
Addressee

No
Postage Stamp
Necessary
If Mailed in the
United States

BUSINESS REPLY CARD

First-Class Permit No. 8, Moline, Illinois 61265

DEERE & CO.

John Deere Road
Moline, Illinois 61265

Service Publications Dept.



Postage
Will be Paid
by
Addressee

No
Postage Stamp
Necessary
If Mailed in the
United States

BUSINESS REPLY CARD

First-Class Permit No. 8, Moline, Illinois 61265

DEERE & CO.

John Deere Road
Moline, Illinois 61265

Service Publications Dept.



Postage
Will be Paid
by
Addressee

No
Postage Stamp
Necessary
If Mailed in the
United States

BUSINESS REPLY CARD

First-Class Permit No. 8, Moline, Illinois 61265

DEERE & CO.

John Deere Road
Moline, Illinois 61265

Service Publications Dept.





M14328NY

John Deere Electric 90 Mower
 1972 Model (Serial No. 1001-10000)
 1973 Model (Serial No. 10001-11704)
 1974 Model (Serial No. 11705-13204)




M14329NY

John Deere Electric 96 Mower
 1975 Model (Serial No. 30001-)

EXPLANATION OF SERIAL NUMBER LISTING

An individual serial number is assigned to each mower. On machines built after June 1974, this number consists of thirteen letters, numbers, or spaces. The first letter indicates the "family of machine" (mower); the next three numbers or letters, the "model or machine designation"; the letter in the fifth position indicates the "model year". This is followed by a space (for computer purposes) and a six-digit serial number and the letter "M" denoting Horicon as the factory of manufacture. When ordering parts, use only the six-digit serial number. When writing about or filling out warranty claims, use all thirteen numbers, letters and spaces shown on the mower serial number plate.

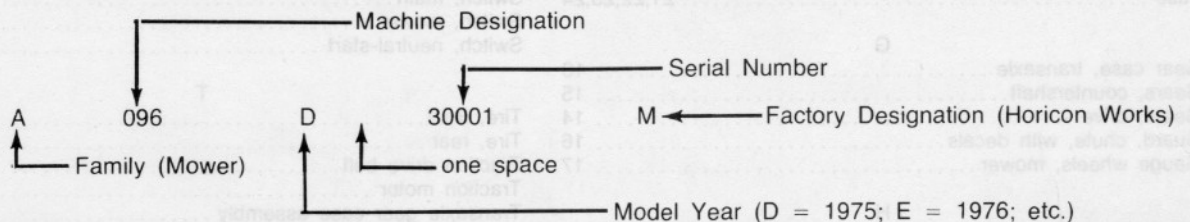

Serial number information is listed parenthetically to show on which machines each part can be used. These listings are explained by the following examples.

- (-) The part can be used on all machines.
- (000000-) The part can be used on all machines beginning with the serial number listed.
- (-000000) The part can be used on all machines up to and including serial number listed.
- (000000-000000) The part can be used on all machines between and including the serial numbers listed.

Where XXXXXX's are listed in place of a serial number it indicates a serial number change was made but the exact serial number had not been established when the catalog went to press.

AN EXPLANATION OF CHANGE INDICATOR LINE

New and revised information is identified by vertical lines marked on the left-hand margin of revised pages. These lines indicate changes affecting the ordering of parts.

SI (International System) Units of Measure


Metric equivalents have been included, where applicable, throughout this parts catalog.

(Specifications and design subject to change without notice)

ALPHABETICAL INDEX


	Page		Page
A		L	
Axle, front	11	Lever, lift	10
Axle, rear	14	Lever, shift	9
B		Lift stop	10
Battery	18	M	
Belt, traction drive	5,6	Main wiring harness	22,23,24
Blades	26,27	Motor, mower	26,27
Box, battery	3	Motor, traction	25
Brake	7,8	Mower deck	16
C		P	
Cables, battery	18	Panel, control	4
Cable, lift	10	R	
Charger, battery	19,20,21	Resistor	22,23,24
Clutch	5,6	Reverse idler	14
Console	3	Rod, lift lever adjusting	10
Control panel	4	Rods, shifter	15
Countershaft gears	15	Rollers, mower	17
Cover, battery	18	S	
Cover, contactors	4	Seat	4
D		Shaft, input	13
Deck, mower	16	Sheave, drive and driven	5,6,25
Differential	14	Shift lever	9
Diode	22,23,24	Shift lever housing	9
Drive sheave, traction	5,25	Shifter forks	15
Driven sheave, traction	5,6	Shifter rods	15
F		Shroud	4
Forks, shifter	15	Solenoids	22,23,24
Frame	3	Steering gear	11
Fuse	21,22,23,24	Steering wheel	11
G		Switch, main	22,23,24
Gear case, transaxle	13	Switch, mower	22,23,24
Gears, countershaft	15	Switch, neutral-start	22,23,24
Gears, drive	14	T	
Guard, chute, with decals	16	Tire, front	11
Gauge wheels, mower	17	Tire, rear	12
H		Traction drive belt	5,6
Harness, wiring, main	22,23,24	Traction motor	25
Harness, wiring, mower motors	26,27	Transaxle gear case assembly	13
Hold-down, battery	18	W	
Housing, shift lever	9	Wheel, front	11
Housing, transaxle	13	Wheel, gauge, mower	17
Hub, rear wheel	12	Wheel, rear	12
I		Wheel, steering	11
Idler, reverse	14	Wiring harness, main	22,23,24
Input, shaft	13	Wiring harness, mower motors	26,27
K			
Kit, receptacle, remote, electric	22,23,24		

FRAME, BATTERY BOX AND CONSOLE

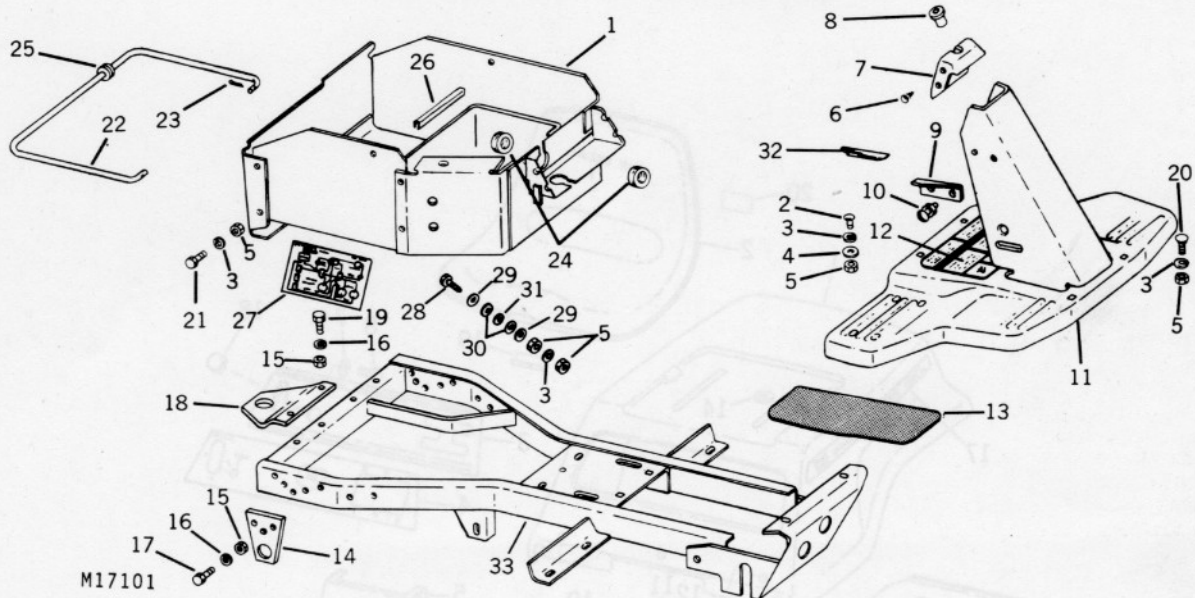


Key	Part No.	Serial No.	Description
1	AM 33914	(- 10000)	Box, battery
	AM 34658	(10001 - 11704)	Box, battery
	AM 35274	(11705 -)	Box, battery
2	3H 1268	(-)	Bolt, cge., 5/16" x 3/4" (4 used)
3	12H 303	(-)	Washer, lock, 5/16" (17 used)
4	24H 1136	(-)	Washer, 11/32" x 11/16" x 0.060" (8 used)
5	14H 785	(-)	Nut, 5/16" (19 used)
6	37H 126	(-)	Screw, self-tapping, No. 8 x 3/8" (3 used)
7	M 46433	(-)	Cap, console
8	M 45262	(-)	Bushing, plastic
9	M 46440	(- 11704)	Latch, lever
	M 48417	(11705 -)	Latch, lever
10	21H 1302	(-)	Screw, mach., 1/4" x 5/8" (2 used)
	12H 302	(-)	Washer, lock, 1/4"
11	AM 33978	(-)	Console
12	M 46519	(- 10000)	Label, instruction
	M 47426	(10001 -)	Label, instruction
13	AM 33750	(-)	Kit, foot-tread (includes R.H. and L.H. treads)
14	M 46385	(-)	Support, axle, rear (2 used)
15	14H 812	(-)	Nut, 3/8" (6 used)
16	12H 304	(-)	Washer, lock, 3/8" (6 used)
17	19H 1936	(-)	Screw, cap, 3/8" (6 used)
18	M 46437	(-)	Plate, hitch
19	19H 1731	(-)	Screw, cap, 3/8" x 1" (2 used)
20	3H 1539	(-)	Bolt, cge., 5/16" x 5/8" (2 used)
21	19H 1813	(-)	Screw, cap, 5/16" x 5/8" (5 used)
22	M 46442	(-)	Rod, support, shroud
23	11H 206	(-)	Pin, cotter, 3/32" x 3/4" (2 used)
24	H 23197	(- 1500)	Grommet (2 used)
	M 44391	(1501 -)	Edging, vinyl (10 ft. [3.048 m] long) (cut as required)
25	M 46796	(1501 -)	Grommet (2 used) (sub. for M46492)
26	M 44391	(-)	Edging, vinyl (10 ft. [3.048 m] long) (cut as required)
27	M 47447	(10001 - 11704)	Decal, electric system (Electric 90)
	M 48727	(11705 -)	Decal, electric system (Electric 90)
	M 80102	(-)	Decal, electric system (Electric 96)
28	19H 1905	(11705 -)	Screw, cap, 5/16" x 1" (2 used)
29	24H 1224	(11705 -)	Washer, 11/32" x 1" x 0.060" (4 used)
30	M 41394	(11705 -)	Washer, fiber, 11/32" x 1" x 0.060" (4 used)
31	M 41393	(11705 -)	Washer, fiber, 11/32" x 41/64" x 0.060" (2 used)
32	M 48418	(11705 -)	Decal, cutting height
33	AM 34569	(-)	Frame
..	AM 35067	(-)	Kit, French and English decal

SEAT, SHROUD AND CONTROL PANEL

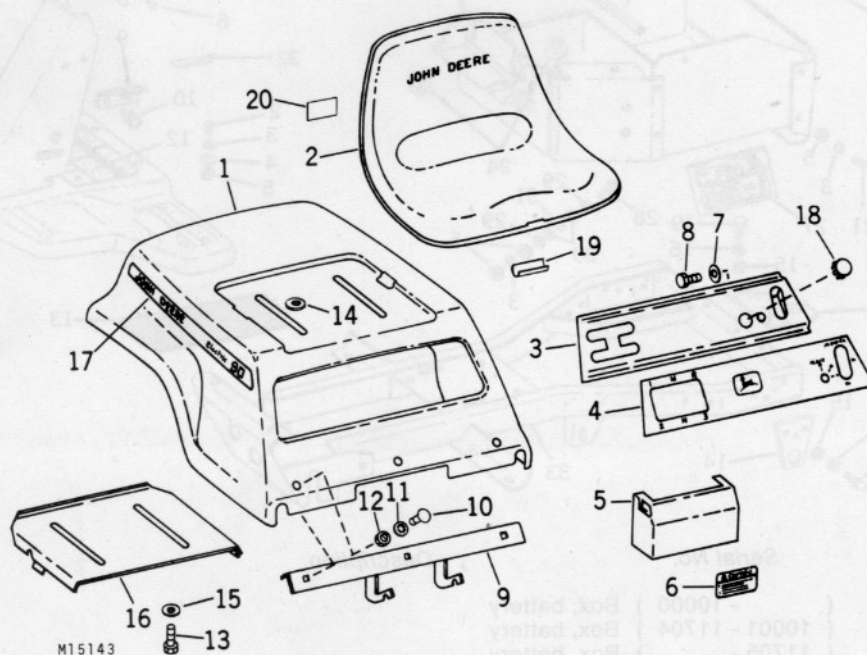

Key	Part No.	Serial No.	Description
1	M 46350	(-)	Shroud
2	AM 34065	(-)	Seat
3	AM 34654	(-)	Panel, control (sub. for AM33983)
4	M 46603	(-)	Decal, instruction
5	M 46435	(- 1500)	Cover, contactors (with M46632 label)
	M 46795	(1501 -)	Cover, contactors
6	M 46632	(- 1500)	Label, cover, contactor
7	24H 1287	(-)	Washer, 9/32" x 5/8" x 0.060" (4 used)
8	19H 1227	(-)	Screw, cap, 1/4" x 1/2" (4 used)
9	AM 33917	(- 1500)	Plate, hinge
	AM 34262	(1501 -)	Plate, hinge
10	M 44395	(-)	Bolt, mounting, hood (3 used)
11	12H 291	(-)	Washer, lock, internal-tooth, 5/16" (3 used)
12	14H 785	(-)	Nut, 5/16"
13	19H 1731	(-)	Screw, cap, 3/8" x 1" (4 used)
14	24H 1718	(-)	Washer, 13/32" x 1-5/8" x 0.134" (4 used)
15	24H 1176	(-)	Washer, 13/32" x 1-1/4" x 0.090" (4 used)
16	AM 34077	(- 1500)	Plate, support
	M 46353	(1501 -)	Plate, support
17	M 46382	(-)	Strip, trim, R.H. (John Deere Electric 90)
	M 46383	(-)	Strip, trim, L.H. (John Deere Electric 90)
	M 80100	(-)	Strip, trim, R.H. (John Deere Electric 96)
	M 80101	(-)	Strip, trim, L.H. (John Deere Electric 96)
18	M 46717	(-)	Button, plug
19	M 47182	(-)	Clip, seat (service only)
20	JD 5274	(-)	Decal, leaping deer

CLUTCH ASSEMBLY AND TRACTION DRIVE BELT (Serial No. -10,000)

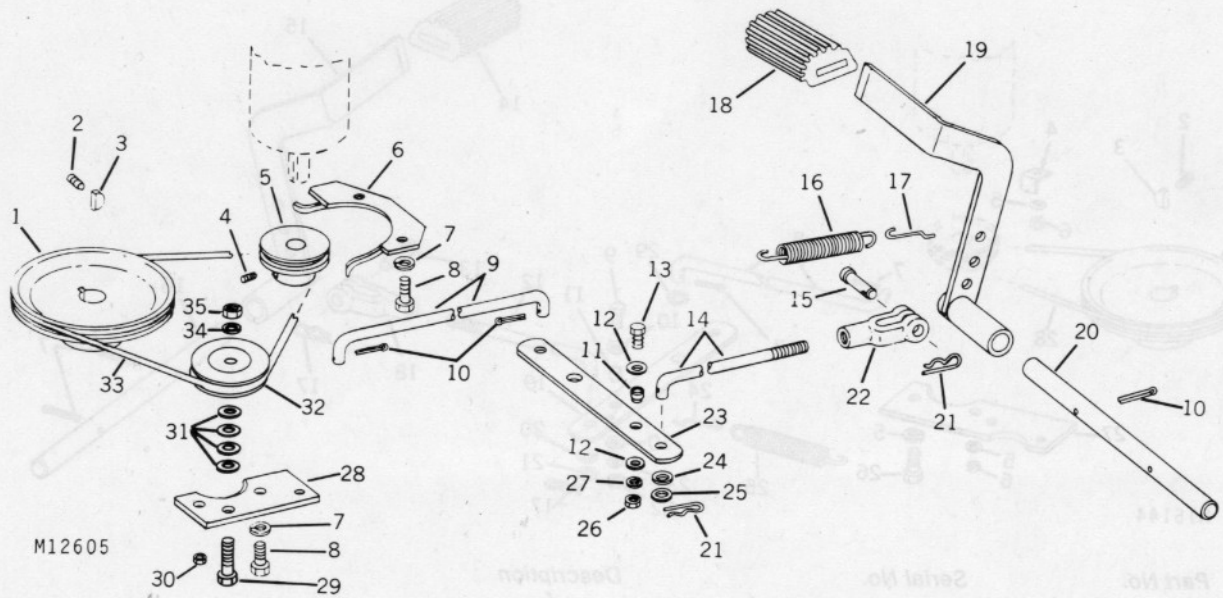


Key	Part No.	Serial No.	Description
1	M 46379	(-)	Sheave, driven
2	22H 776	(-)	Screw, socket-head set, 5/16" x 7/16" (2 used)
3	26H 11	(-)	Key, Woodruff, 3/16" x 5/8"
4	22H 975 *	(-)	Screw, socket-head set, 5/16" x 5/16"
5	M 47389 *	(-)	Sheave, drive (sub. for M46268)
6	AM 34713 *	(-)	Guide, belt (sub. for AM34078)
7	12H 303	(-)	Washer, lock, 5/16" (3 used)
8	19H 1900	(-)	Screw, cap, 5/16" x 3/4"
9	M 46394	(-)	Rod, motor clutch
10	11H 211	(-)	Pin, cotter, 1/8" x 3/4" (4 used)
11	M 46374	(-)	Spacer
12	24H 1219	(-)	Washer, 7/16" x 1" x 0.075" (2 used)
13	19H 1801	(-)	Screw, cap, 3/8" x 2"
14	M 46387	(-)	Rod, clutch
15	U 11004	(-)	Pin, drilled
16	17047 A	(-)	Spring
17	M 46366	(-)	Hook, spring
18	M 44509	(-)	Pad, pedal
19	AM 33966	(-)	Pedal, clutch
20	M 46398	(-)	Shaft, clutch
21	J 16931	(-)	Pin, spring locking (2 used)
22	L 299 T	(-)	Clevis
23	M 46391	(-)	Arm, clutch pivot
24	M 40691	(-)	Washer, spring
25	24H 1224	(-)	Washer, flat, 11/32" x 1" x 0.060"
26	14H 812	(-)	Nut, 3/8"
27	12H 304	(-)	Washer, lock, 3/8"
28	M 47439 *	(-)	Plate, motor face (sub. for M46266)
29	19H 1732 *	(-)	Bolt, hex. head, 3/8" x 1-1/4"
30	14H 611 *	(-)	Nut, jam, 5/16"
31	24H 1303 *	(-)	Washer, flat, 13/32" x 11/16" x 0.060" (4 used)
32	AM 33257 *	(-)	Sheave, idler
33	M 46758	(-)	Belt, traction drive
34	12H 298 *	(-)	Washer, lock, 3/8"
35	14H 812 *	(-)	Nut, 3/8"

Kit listed below includes all parts followed by an asterisk ():
 .. BM 15779 (- 10000) MODIFICATION KIT

CLUTCH ASSEMBLY AND TRACTION DRIVE BELT


(Serial No. 10,001-)

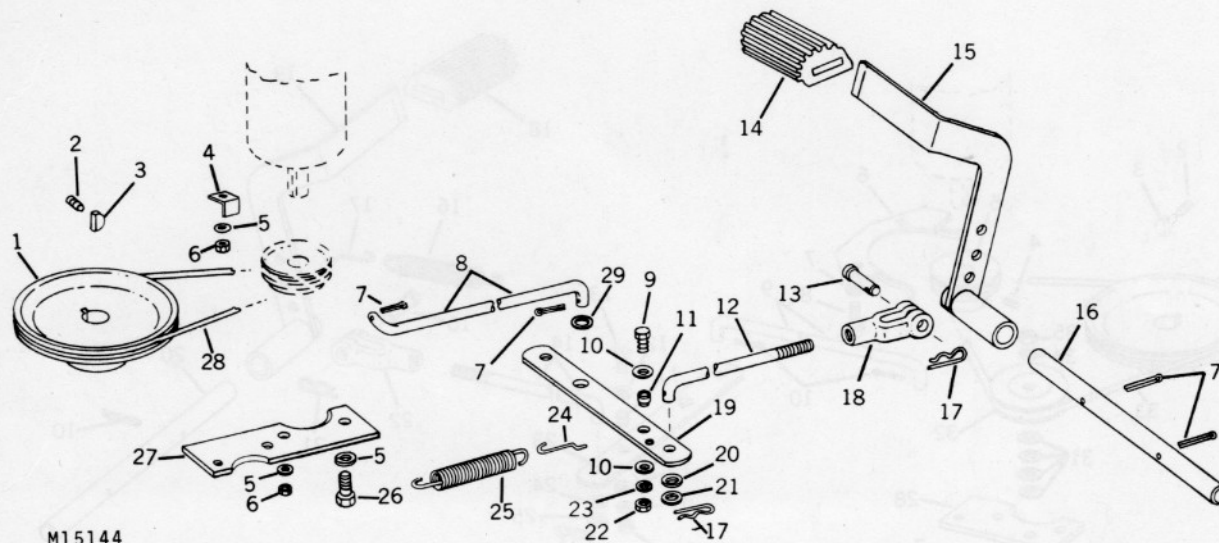

M15144

Key	Part No.	Serial No.	Description
1	M 47387	(-)	Sheave, driven
2	22H 837	(-)	Screw, set, 3/8" x 5/8" (2 used)
3	26H 11	(-)	Key, Woodruff, 3/16" x 5/8"
4	M 47414	(-)	Guide, belt
5	12H 303	(-)	Washer, lock, 5/16" (3 used)
6	14H 785	(-)	Nut, 5/16" (2 used)
7	11H 211	(-)	Pin, cotter, 1/8" x 3/4" (4 used)
8	M 47392	(-)	Rod, motor clutch
9	19H 1801	(-)	Bolt, hex. head, 3/8" x 2"
10	24H 1219	(-)	Washer, 7/16" x 1" x 0.075" (2 used)
11	M 46374	(-)	Spacer
12	M 47391	(-)	Rod, clutch
13	U 11004	(-)	Pin, drilled
14	M 44509	(-)	Pad, pedal
15	AM 33966	(-)	Pedal, clutch
16	M 46398	(-)	Shaft, clutch
17	J 16931	(-)	Pin, spring locking (2 used)
18	L 299 T	(-)	Clevis
19	M 47393	(-)	Arm, clutch pivot
20	M 40691	(-)	Washer, spring
21	24H 1224	(-)	Washer, flat, 11/32" x 1" x 0.060"
22	14H 812	(-)	Nut, 3/8"
23	12H 304	(-)	Washer, lock, 3/8"
24	M 46366	(- 11704)	Hook, spring
	M 47396	(11705 -)	Hook, spring
25	M 40839	(-)	Spring
26	19H 1900	(-)	Bolt, hex. head, 5/16" x 3/4"
27	M 47390	(- 11704)	Plate, motor face
	M 48419	(11705 -)	Plate, motor face
28	M 41592	(-)	Belt, traction drive
29	24H 1887	(-)	Washer, 11/32" x 1" x 0.134" (2 used)


BRAKE ASSEMBLY (Serial No. 10,000 -10,000)

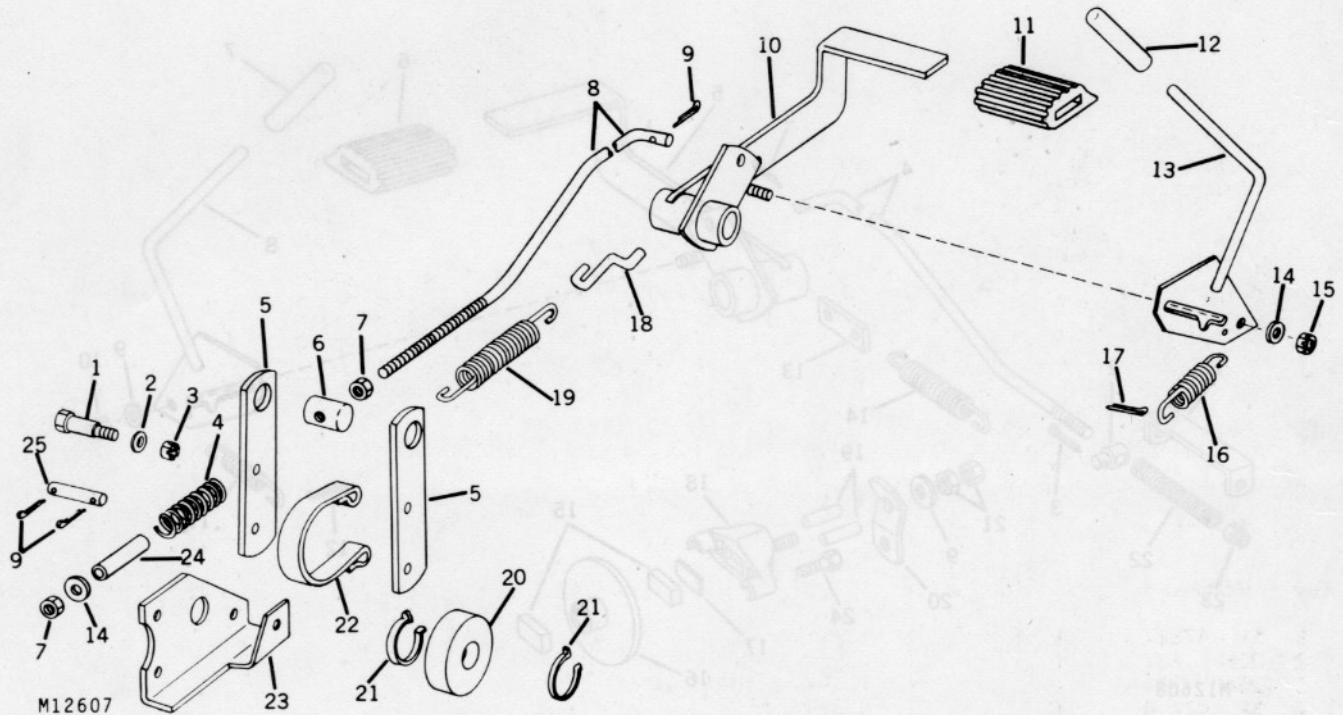

Key	Part No.	Serial No.	Description
1	M 47442 *	(-)	Bolt, shoulder, 5/16"
2	24H 287 *	(-)	Washer, flat, 9/32" x 5/8" x 0.060"
3	M 40333 *	(-)	Nut, elastic stop, 1/4"
4	A 4546 R	(-)	Spring
5	M 46359	(-)	Arm, brake (2 used)
6	M 46446	(-)	Pivot, brake
7	14H 785	(-)	Nut, 5/16" (2 used)
8	M 46447	(-)	Rod, brake
9	11H 211	(-)	Pin, cotter, 1/8" x 3/4" (3 used)
10	AM 33967	(-)	Pedal, brake
11	M 44509	(-)	Pad, pedal
12	M 45915	(-)	Handle, brake lock lever
13	AM 34023	(-)	Lever, brake lock
14	24H 1224	(-)	Washer, 11/32" x 1" x 0.060" (2 used)
15	W 11955	(-)	Nut, lock, 5/16"
16	L 1142 C	(-)	Spring
17	11H 236	(-)	Pin, cotter, 1/8" x 1"
18	M 46366	(-)	Hook, spring
19	M 40839	(-)	Spring
20	M 46377	(-)	Drum, brake
21	A 11318	(-)	Ring, snap (2 used)
22	AM 33974	(-)	Band, brake
23	AM 33980	(-)	Support, brake
24	M 46494	(-)	Spacer
25	M 46386	(-)	Pin


Kit listed below includes all parts followed by an asterisk ():
 .. BM 15779 (- 10000) MODIFICATION KIT

BRAKE ASSEMBLY (Serial No. 10,001-)

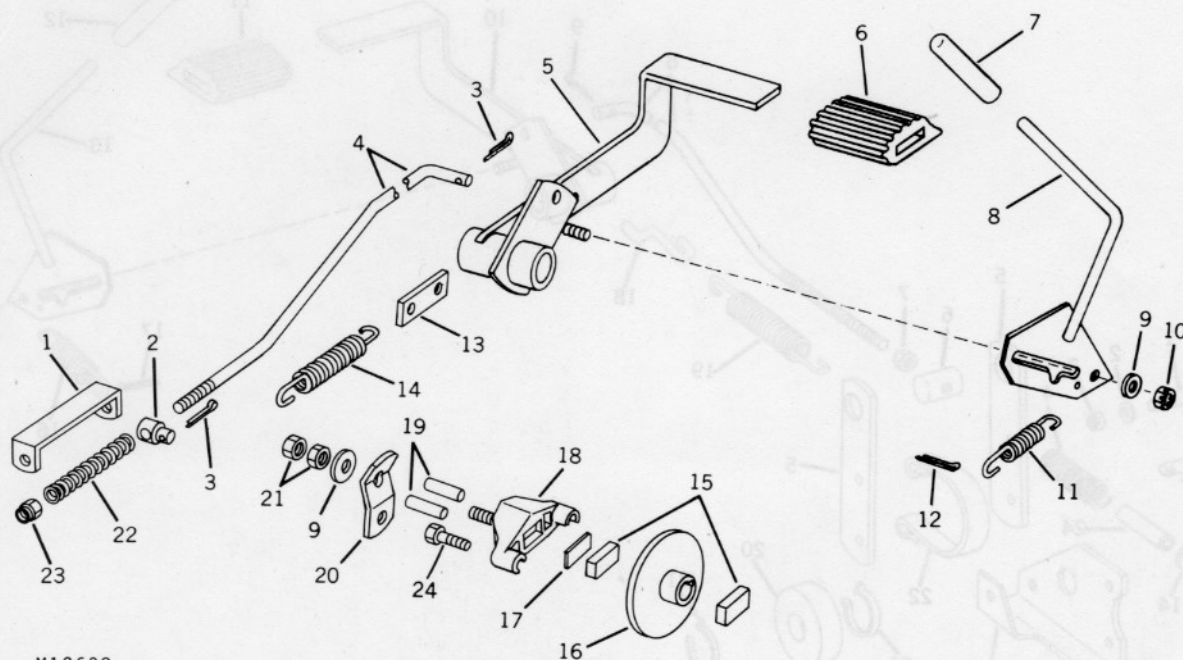


M12608

Key	Part No.	Serial No.	Description
1	M 44957	(-)	Holder, spring
2	M 47354	(-)	Nut, adjusting
3	11H 206	(-)	Pin, cotter, 3/32" x 3/4" (2 used)
4	M 47186	(-)	Rod, brake
5	AM 33967	(-)	Pedal, brake
6	M 44509	(-)	Pad, pedal
7	M 45915	(-)	Handle, brake lock lever
8	AM 34023	(-)	Lever, brake lock
9	24H 1224	(-)	Washer, plain, 11/32" x 1" x 0.060" (2 used)
10	W 11955	(-)	Nut, lock, 5/16"
11	L 1142 C	(-)	Spring
12	11H 216	(-)	Pin, cotter, 3/16" x 1"
13	M 47428	(-)	Strap, brake spring
14	17047 A	(-)	Spring
15	M 47316	(-)	Pad, brake (2 used)
16	M 47319	(-)	Disk, brake
17	M 47317	(-)	Plate, brake pad
18	AM 34620	(-)	Holder, brake pad
19	M 41028	(-)	Pin, dowel (2 used)
20	M 47318	(-)	Lever, brake
21	M 63277	(-)	Nut, lock, 5/16"-24 (2 used)
22	H 29175	(-)	Spring
23	M 40699	(-)	Nut, lock, 5/16"-18
24	19H 1791	(-)	Screw, cap, thread-cutting, 1/4" x 1-1/4" (2 used)

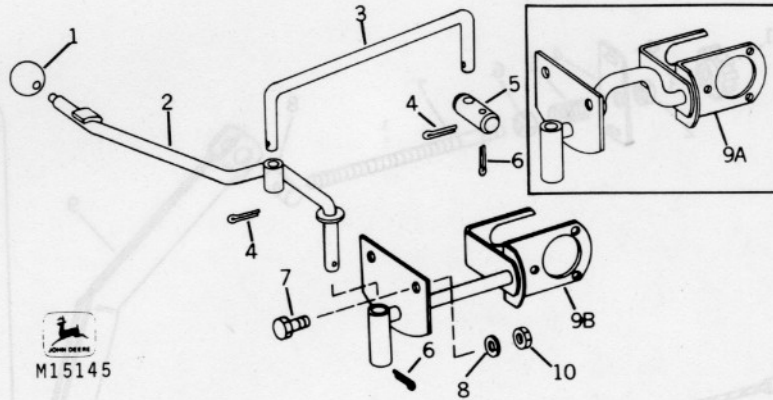
SHIFT LEVER

Key	Part No.	Serial No.	Description
1	M 40005	(-)	Knob
2	AM 33991	(- 10000)	Lever, shift
	AM 34655	(10001 -)	Lever, shift
3	M 46434	(-)	Rod, transfer
4	11H 211	(-)	Pin, cotter, 1/8" x 3/4" (2 used)
5	M 46436	(-)	Extension, transmission lever
6	11H 239	(-)	Pin, cotter, 5/32" x 1" (2 used)
7	19H 1813	(-)	Screw, cap, 5/16" x 5/8" (2 used)
8	12H 303	(-)	Washer, lock, 5/16" (2 used)
9A	AM 33990	(- 11704)	Shaft, pivot
9B	AM 34652	(11705 -)	Shaft, pivot (sub. AM33990)
10	14H 785	(-)	Nut, 5/16"

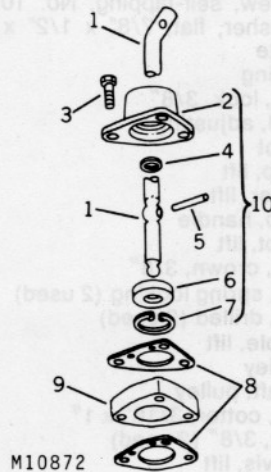
SHIFT LEVER HOUSING

Key	Part No.	Serial No.	Description
1	M 46660	(-)	Lever, shift
2	...	(-)	Housing, shift lever (sub. AM30905)
3	M 46684	(-)	Screw, cap, socket-head, 1/4" x 1-3/4" (3 used)
4	M 41026	(-)	Seal, rubber
5	34H 284	(-)	Pin, spring, 3/16" x 1-1/4"
6	M 41448	(-)	Keeper, shift lever (sub. AM30905)
7	M 41029	(-)	Ring, snap, shift lever
8	M 40349	(-)	Gasket, shift lever housing (2 used)
9	M 46661	(-)	Block, riser
10	AM 30905	(-)	Kit, shift lever housing

LIFT LEVER AND ADJUSTING ROD

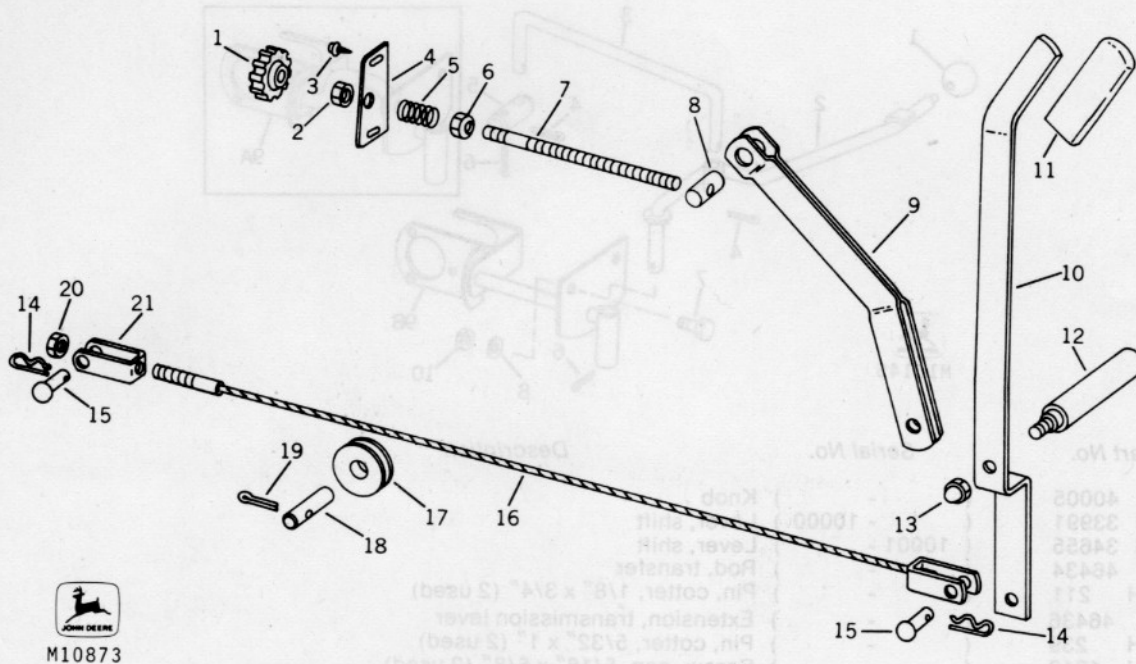


Key	Part No.	Serial No.	Description
1	M 41001	(-)	Knob
2	14H 812	(-)	Nut, 3/8"
3	37H 42	(-)	Screw, self-tapping, No. 10 x 3/8"
	24H 1283	(-)	Washer, flat, 7/8" x 1/2" x 0.048"
4	M 46416	(-)	Plate
5	E 10417	(-)	Spring
6	M 63440	(-)	Nut, lock, 3/8"
7	M 46493	(-)	Rod, adjusting
8	M 46370	(-)	Pivot
9	AM 33969	(-)	Stop, lift
10	M 46438	(-)	Lever, lift
11	F 2948 R	(-)	Grip, handle
12	M 46439	(-)	Pivot, lift
13	14H 1033	(-)	Nut, crown, 3/8"
14	J 16931	(-)	Pin, spring locking (2 used)
15	M 40753	(-)	Pin, drilled (2 used)
16	AM 33977	(-)	Cable, lift
17	M 46388	(-)	Pulley
18	M 46389	(-)	Shaft, pulley
19	11H 216	(-)	Pin, cotter, 3/16" x 1"
20	14H 812	(-)	Nut, 3/8" (2 used)
21	M 46390	(-)	Clevis, lift

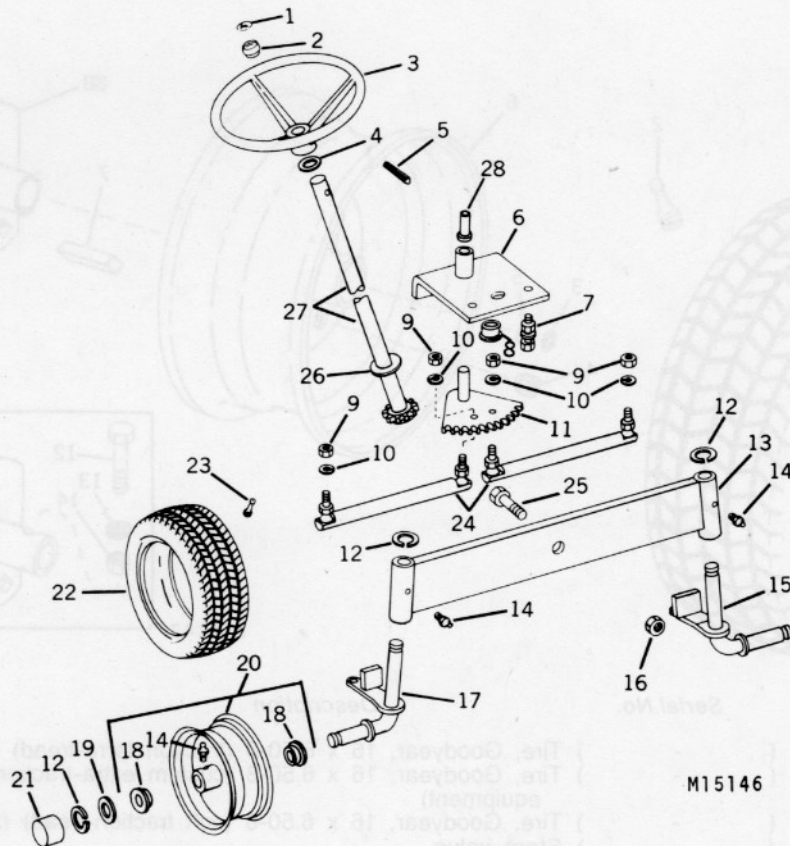STEERING GEAR, FRONT WHEEL, TIRE AND AXLE

M15146


Key	Part No.	Serial No.	Description
1	M 46707	(-)	Transfer, steering wheel
2	M 46708	(-)	Cap, steering wheel hub
3	AM 34162	(-)	Wheel, steering
4	24H 1391	(-)	Washer, plain, 25/32" x 1-5/8" x 0.060"
5	M 41531	(- 1500)	Pin, groove
	25H 98	(1501 - 10000)	Pin, groove, type A
	M 41529	(10001 -)	Pin, groove, 1/4" x 1-3/4"
6	AM 32687	(- 10000)	Plate, gear support
7	19H 1731	(- 10000)	Screw, cap, 3/8" x 1" (2 used)
	14H 812	(- 10000)	Nut, 3/8" (2 used)
	12H 304	(- 10000)	Washer, lock, 3/8" (2 used)
8	M 45262	(-)	Bushing, plastic
9	14H 774	(-)	Nut, jam, 3/8" UNF (4 used)
10	12H 304	(-)	Washer, lock, 3/8" (4 used)
11	AM 32686	(-)	Gear, steering
12	M 40514	(-)	Ring, snap (4 used)
13	AM 33919	(-)	Axle assembly
14	JD 7797	(-)	Fitting, grease, straight, 1/4" (4 used)
15	AM 32683	(-)	Spindle, L.H.
16	H 32811	(-)	Nut, lock, 1/2"
17	AM 32682	(-)	Spindle, R.H.
18	M 41522	(-)	Bearing, wheel (4 used)
19	M 41361	(-)	Washer, spindle (2 used)
20	AM 32717	(-)	Wheel, front (2 used)
21	M 41552	(-)	Cap, spindle (2 used)
22	M 44606	(-)	Tire, Goodyear (11 x 4.00-5) traction-terra tread (2 used)
	M 80366	(-)	Tire, Goodyear (11 x 4.00-5) soft-traction tread (2 used)
23	AM 30795	(-)	Stem, valve
24	AM 32692	(-)	Rod, tie (2 used)
25	19H 1815	(-)	Screw, cap, 1/2" x 1-1/4"
26	24H 1183	(-)	Washer, flat, 25/32" x 1-3/4" x 0.105"
27	AM 32680	(-)	Shaft, steering
28	M 47067	(-)	Bushing, nylon

REAR WHEEL, TIRE AND HUB

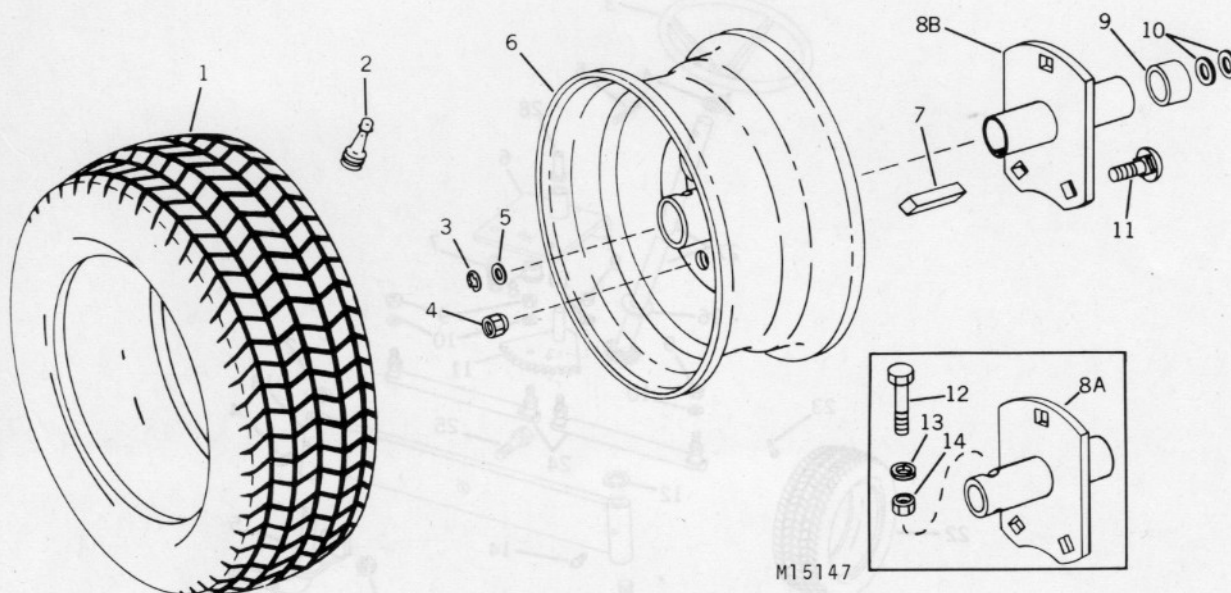

Key	Part No.	Serial No.	Description
1	M 40719	(-)	Tire, Goodyear, 16 x 6.50-8 (traction terra-tread) (standard)
	M 47467	(-)	Tire, Goodyear, 16 x 6.50-8 (custom extra-traction terra-tread) (extra equipment)
	M 80368	(-)	Tire, Goodyear, 16 x 6.50-8 (soft traction-tread) (2 used)
2	AM 30346	(-)	Stem, valve
3	R 27434	(-)	Ring, retaining (2 used)
4	A 15498	(-)	Nut, wheel, 7/16" (6 used)
5	24H 1746	(-)	Washer, 25/32" x 1-1/8" x 0.120" (2 used)
6	AM 33596	(-)	Wheel, rear (2 used)
7	...	(-)	Key, 3/16" x 2.40" (cut from H64373 key stock)
8A	AM 34181	(- 10000)	Hub, wheel (2 used)
	AM 34532	(10001 - 11704)	Hub, wheel (2 used)
8B	AM 34991	(11705 -)	Hub, wheel (2 used)
9	M 40636	(11705 -)	Spacer (2 used)
10	24H 1797	(11705 -)	Washer, 25/32" x 1-1/2" x 0.060" (use as required)
11	3H 1572	(- 11704)	Bolt, round head, 7/16" x 1" (6 used)
12	M 47013	(- 11704)	Screw, cap, 5/16" x 1-3/4", high-strength (2 used)
13	12H 303	(- 11704)	Washer, lock, 5/16" (4 used)
14	M 40699	(- 11704)	Nut, lock, 5/16" (2 used)


TRANSAXLE GEAR CASE ASSEMBLY AND INPUT SHAFT

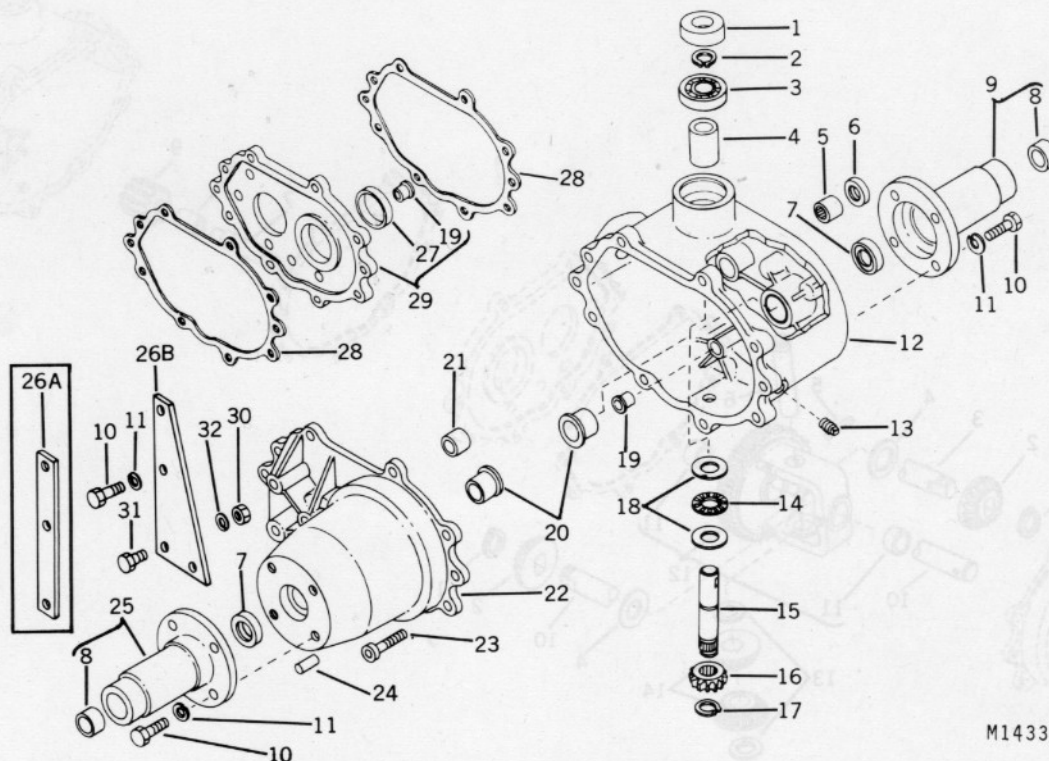

M14330


Key	Part No.	Serial No.	Description
1	M 46680	(-)	Seal, oil
2	A 11318	(-)	Ring, snap
3	AM 34150	(-)	Bearing, ball
4	M 46647	(-)	Bearing, bronze
5	AM 34141	(-)	Bearing, needle
6	M 46679	(-)	Seal, oil
7	M 40374	(-)	Seal, oil (2 used)
8	AM 34148	(-)	Bearing, needle
9	AM 34147	(-)	Housing, axle, RH (includes AM34148)
10	19H 1905	(-)	Screw, cap, 5/16" x 1" (10 used)
11	12H 303	(-)	Washer, lock, 5/16" (10 used)
12	AM 34140	(-10000)	Case assembly (includes AM34141, M46645, M46646 and M46647)
	AM 34619	(10001 -)	Case assembly (includes AM34141, M46645 and M46647)
13	15H 638	(-)	Plug, pipe, 1/8"
14	AM 34149	(-)	Bearing, thrust
15	M 46681	(-)	Shaft, input
16	M 46682	(-)	Pinion, input
17	M 46657	(-)	Ring, retaining
18	M 46676	(-)	Washer, thrust
19	M 46646	(-)	Bearing, bronze (2 used)
20	M 46645	(-)	Bearing, bronze (2 used)
21	AM 34151	(-)	Bearing, needle
22	AM 34143	(-)	Cover assembly, transaxle (includes AM34151 and M46645)
23	M 46683	(-)	Screw, cap, socket-head, 1/4" x 1-1/4" (8 used)
24	M 41028	(-)	Pin, dowel (4 used)
25	AM 34146	(-)	Housing, axle, LH (includes AM34148)
26A	M 46380	(-11704)	Bracket, transmission
26B	M 48415	(11705 -)	Bracket, transmission
27	M 46648	(-)	Bearing, bronze
28	M 46675	(-)	Gasket, case and cover (2 used)
29	AM 34142	(-)	Plate, center (includes M46646 and M46648)
30	14H 812	(-)	Nut, 3/8"
31	19H 1731	(-)	Screw, cap, 3/8" x 1"
32	12H 304	(-)	Washer, lock, 3/8"
..	AM 33973	(-10000)	Transmission complete
..	AM 34533	(10001 - 11704)	Transmission complete (sub. AM34993, two AM35991, two M40636, two R27434, two 24H 1746, four 24H 1797, and M64373 key stock (cut to length))
..	AM 34993	(11705 -)	Transmission complete

DIFFERENTIAL AND REVERSE IDLER ASSEMBLY

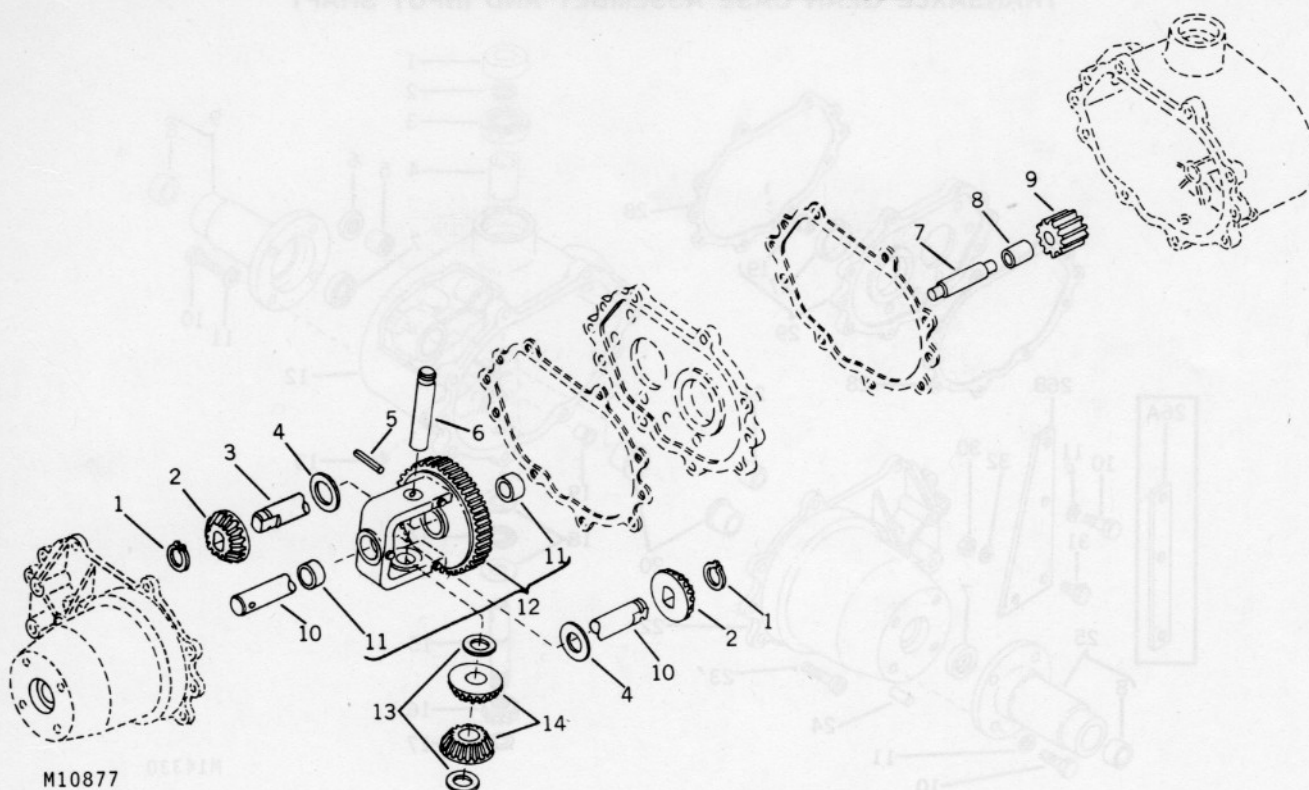

M10877


Key	Part No.	Serial No.	Description
1	M 45328	(-)	Ring, snap
2	M 45324	(-)	Gear, bevel (2 used)
3	M 46650	(- 11704)	Axle, R.H.
4	M 48408	(11705 -)	Axle, R.H.
5	M 40378	(-)	Washer, thrust
6	34H 283	(-)	Pin, spring, 3/16" x 1-1/8"
7	M 46652	(-)	Pin, drive
8	M 46672	(-)	Shaft, idler, reverse
9	M 46673	(-)	Spacer, idler, reverse
10	M 46671	(-)	Idler, reverse
11	M 46651	(- 11704)	Axle, L.H.
12	M 48409	(11705 -)	Axle, L.H.
13	M 46649	(-)	Bearing, bronze (2 used)
14	AM 34144	(-)	Gear, differential (includes two M46649)
15	M 46653	(-)	Washer, thrust
16	M 45325	(-)	Pinion, bevel (2 used)

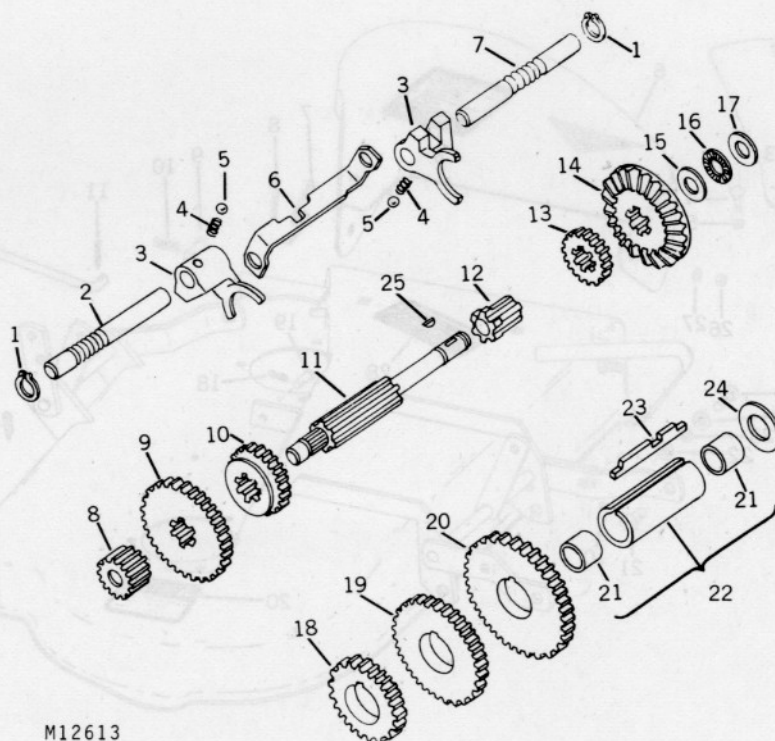COUNTERSHAFT GEARS, SHIFTER RODS, AND FORKS

M12613

Key	Part No.	Serial No.	Description
1	R 32507	(-)	Ring, snap
2	M 46659	(-)	Rod, shifter (2nd and 3rd speeds)
3	M 11021	(-)	Fork, shifter
4	M 40350	(-)	Spring (2 used)
5	M 40351	(-)	Ball (2 used)
6	M 46674	(-)	Stop, shifter
7	M 46656	(-)	Rod, shifter (1st and reverse speeds)
8	M 46666	(-)	Gear, spur (12 teeth)
9	M 46665	(-)	Gear, shifting (1st. and reverse speeds)
10	M 46664	(-)	Gear, shifting (2nd and 3rd speeds)
11	M 46663	(- 10000)	Shaft, shifter and brake
	M 47288	(10001 -)	Shaft, shifter and brake
12	M 46655	(-)	Shaft, idler
13	M 40361	(-)	Gear (16 teeth)
14	M 46662	(-)	Gear, bevel (33 teeth)
15	M 46677	(-)	Washer, thrust
16	AM 34149	(-)	Bearing, thrust
17	M 46676	(-)	Washer, thrust
18	M 46669	(-)	Gear, countershaft (25 teeth)
19	M 46668	(-)	Gear, countershaft (34 teeth)
20	M 46667	(-)	Gear, countershaft drive (39 teeth)
21	M 46654	(-)	Bearing, bronze (2 used)
22	AM 34145	(-)	Sleeve, countershaft (includes two M46654)
23	M 46670	(-)	Key, countershaft
24	M 40378	(-)	Washer, thrust
25	26H 11	(-)	Key, Woodruff

MOWER DECK

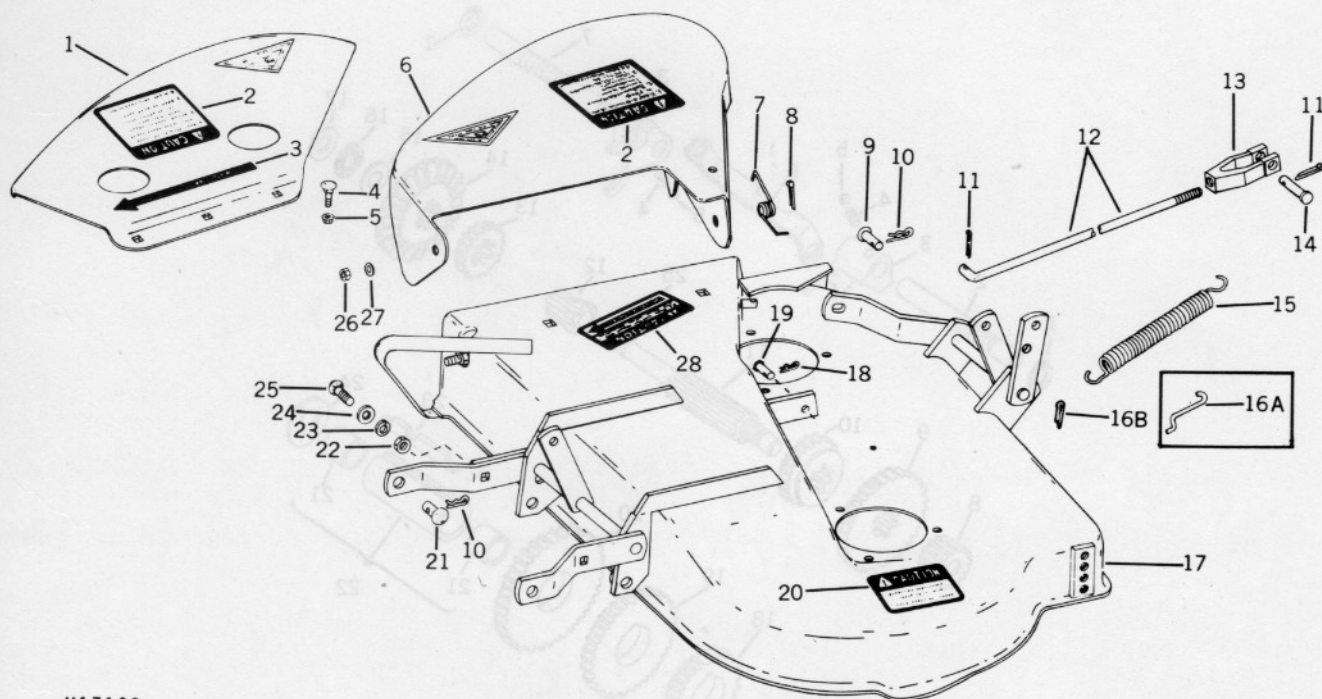


M17102


Key	Part No.	Serial No.	Description
1	AM 34188	(- 10000)	Guard, chute (includes decals)
2	M 46443	(-)	Decal, "CAUTION"
3	M 44103	(- 10000)	Decal, "WIDTH OF CUT"
4	3H 1268	(- 10000)	Bolt, round-head, 5/16" x 3/4" (3 used)
5	M 40699	(- 10000)	Nut, elastic stop, 5/16" (3 used)
6	AM 34522 *	(10001 -)	Guard, chute (includes decals)
7	M 47030 *	(10001 -)	Spring
8	11H 236 *	(10001 -)	Pin, cotter, 1/8" x 1"
9	M 45562	(-)	Pin, rear mounting
10	M 40461	(-)	Pin, spring locking
11	11H 211	(-)	Pin, cotter, 1/8" x 3/4" (2 used)
12	M 44541	(-)	Rod, transfer
13	M 42228	(-)	Yoke
14	M 40753	(-)	Pin, drilled, 3/8" x 1-1/4"
15	M 40839	(-)	Spring
16A	M 46366	(- 11704)	Hook
16B	11H 216	(11705 -)	Pin, cotter, 3/16" x 1"
17	AM 34672 *	(-)	Deck with decals (includes all parts marked with an asterisk *) (sub. for AM33909)
18	J 16931	(-)	Pin, spring locking
19	P 10256	(- 11704)	Pin, drilled, 3/8" x 1-3/8"
	M 40753	(11705 -)	Pin, drilled, 3/8" x 1-5/16"
20	M 45847	(-)	Decal, "CAUTION"
21	M 45030	(-)	Pin, front mounting (2 used)
22	14H 812	(- 1119)	Nut, 3/8"
	14H 813	(1120 -)	Nut, 7/16"
23	12H 336	(-)	Washer, lock, internal-external tooth, 7/16"
24	24H 1303	(- 1119)	Washer, flat, 13/32" x 11/16" x 0.060"
	24H 1325 *	(1120 -)	Washer, flat, 15/32" x 59/64" x 0.060"
25	3H 1519	(- 1119)	Bolt, round-head, 3/8" x 1"
	3H 1686	(1120 -)	Bolt, round-head, 7/16" x 1-1/4"
26	M 47031 *	(10001 -)	Nut, elastic jam, 3/8"
27	24H 1305	(1501 -)	Washer, flat, 13/32" x 13/16" x 0.060"
28	M 47280	(10001 -)	Decal, "CAUTION"

*See Key 17

ROLLERS AND GAUGE WHEELS

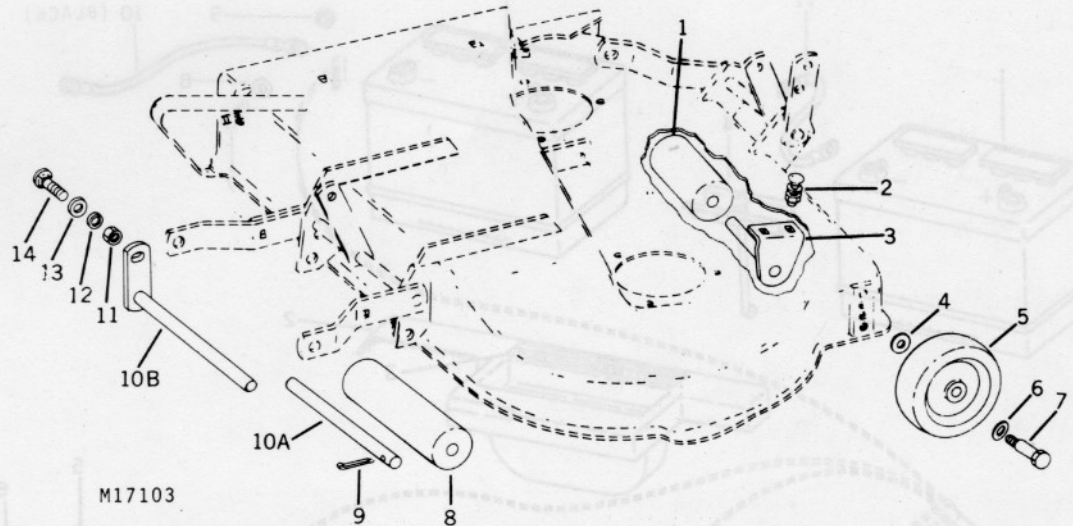


Key	Part No.	Serial No.	Description
1	M 40213	(-)	Roller, rear, 4" (10.16 cm) wide
2	3H 1268	(-)	Bolt, round-head, 5/16" x 3/4" (2 used)
	12H 303	(-)	Washer, lock, 5/16" (2 used)
	14H 785	(-)	Nut, 5/16" (2 used)
3	AM 33911	(-)	Bracket, roller
4	24H 1308	(-)	Washer, 13/32" x 1" x 0.134" (2 used)
5	AM 33718	(-)	Wheel, gauge, 5" (12.70 cm) (2 used)
6	M 46935	(-)	Washer, spring (2 used)
7	M 40659	(-)	Bolt, gauge wheel (2 used)
8	M 41644	(-)	Roller, front, 7" (17.78 cm) wide
9	11H 218	(-1500)	Pin, cotter, 3/16" x 1-1/2"
10A	M 46271	(-1500)	Shaft, front roller
10B	AM 34264	(1501 -)	Shaft, front roller
11	14H 812	(1501 -)	Nut, 3/8"
12	12H 304	(1501 -)	Washer, lock, 3/8"
13	24H 1305	(1501 -)	Washer, flat, 13/32" x 13/16" x 0.060"
14	3H 1519	(1501 -)	Bolt, round-head, 3/8" x 1"

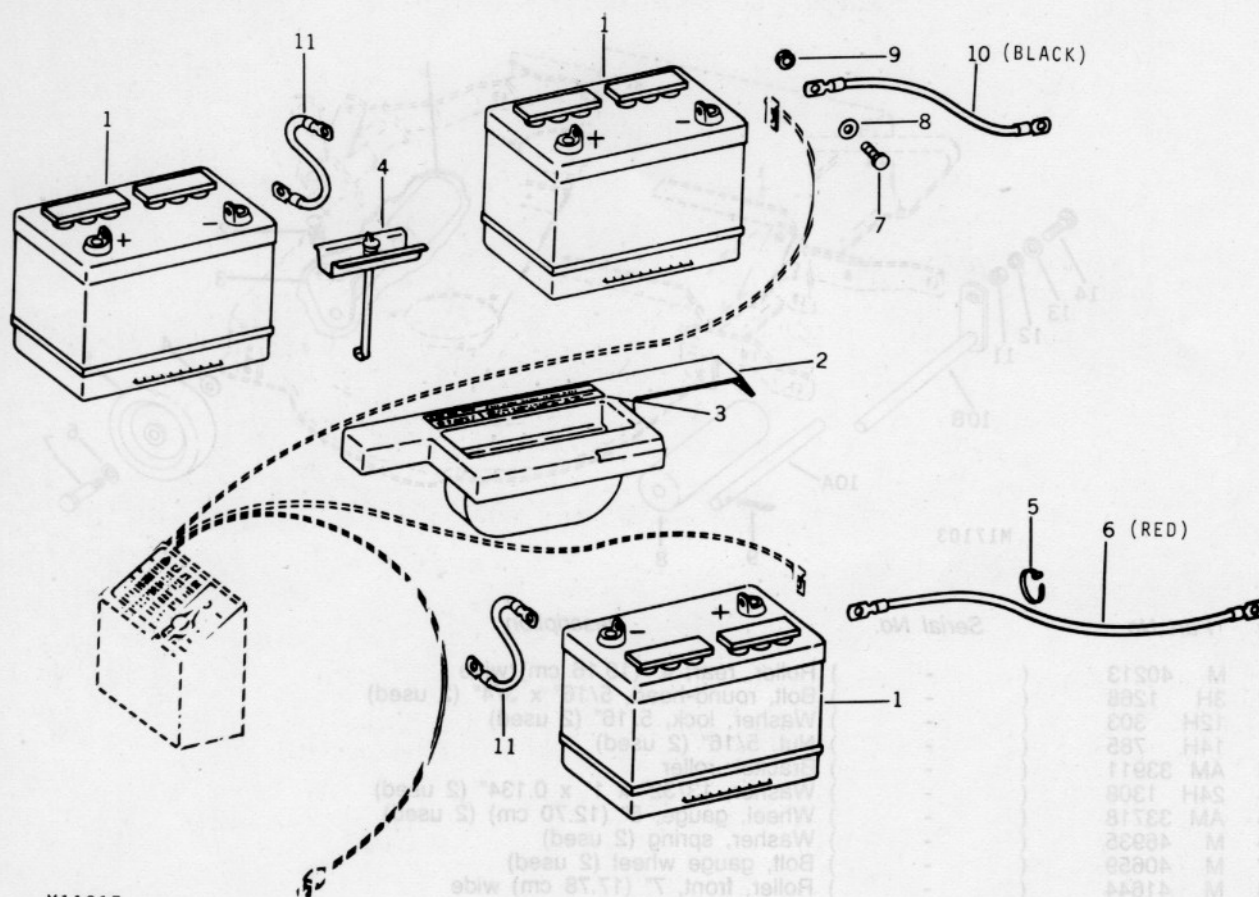BATTERY, BATTERY COVER AND CABLES

M11317

Key	Part No.	Serial No.	Description
1	AM 35175	(-)	Battery, 12-volt, high-capacity (sub. for AM33995) (3 used)
2	M 46357	(- 1500)	Cover, battery (with M46352 label)
	M 46794	(1501 -)	Cover, battery
3	M 46352	(- 1500)	Label, "battery maintenance"
4	AM 33965	(-)	Hold-down, battery
5	M 63300	(-)	Strap, tie (3 used)
6	AM 33997	(-)	Cable, battery, positive (red)
7	19H 1900	(-)	Screw, cap, 5/16" x 3/4" (6 used)
	19H 1948	(-)	Screw, cap, 1/4" x 3/4" (negative terminals, Prestolite battery only) (3 used)
8	24H 1136	(-)	Washer, 11/32" x 11/16" x 0.060" (6 used)
9	14H 785	(-)	Nut, 5/16" (6 used)
	14H 786	(-)	Nut, 5/16" (negative terminals, Prestolite battery only) (3 used)
10	AM 33998	(-)	Cable, battery, ground
11	AM 30768	(-)	Cable, battery (between batteries) (2 used)


BATTERY CHARGER (Electric 90, Serial No. -11,704)

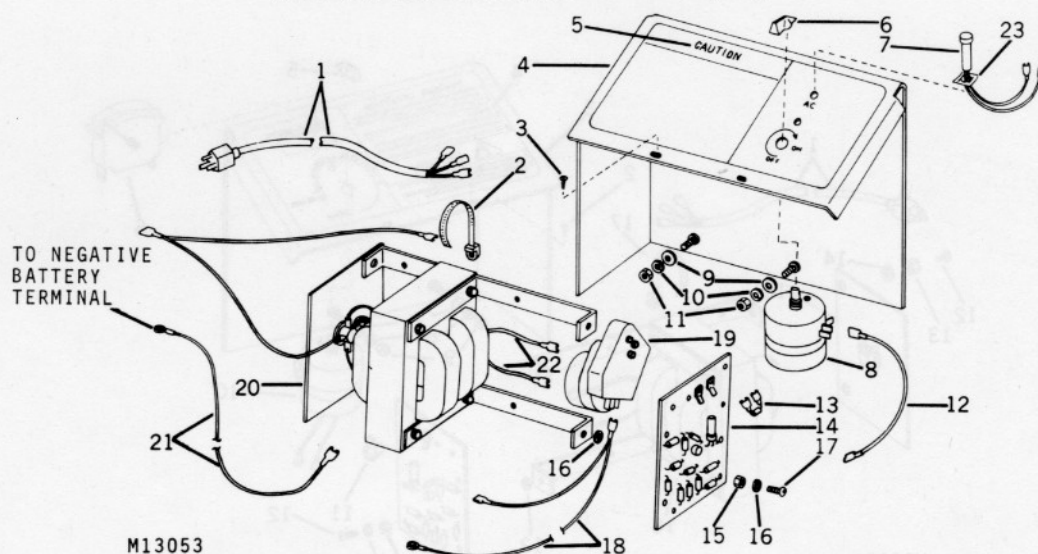

M13053

Key	Part No.	Serial No.	Description
1	AM 34779	(-)	Cord, charger (AC lead) (sub. for AM34353)
2	M 46940	(-)	Clamp, cable (2 used)
3	37H 42	(-)	Screw, self-tapping, No. 10 x 3/8" (2 used)
4	AM 34352	(-)	Box, charger (sub. AM34634 charger complete)
5	M 46351	(-)	Decal
6	M 46716	(-)	Knob (includes set screw)
7	AM 34778	(-)	Light, indicator (includes speed nut) (sub. for AM34351)
8	AM 34348	(-)	Timer, control (includes nut and washer)
9	24H 1287	(-)	Washer, flat, 9/32" x 5/8" x 0.060" (2 used)
10	12H 302	(-)	Washer, lock, 1/4" (2 used)
11	14H 786	(-)	Nut, 1/4" (4 used)
12	...	(-)	Wire, red (22 gauge)
13	AM 34695	(-)	Fuse assembly
14	AM 34694	(-)	Board, circuit (sub. for AM34347)
15	14H 631	(-)	Nut, No. 10-32 (2 used)
16	12H 295	(-)	Washer, lock, internal No. 10 (4 used)
17	21H 1161	(-)	Screw, machine, No. 10 x 1/2" (2 used)
18	AM 34777	(-)	Harness, wiring (sub. for AM34354)
19	AM 34349	(-)	Timer, boost
20	AM 34776	(-)	Transformer and rectifier (sub. for AM34346)
21	...	(-)	Wire, negative (54" [1.372 m] long - 16 gauge)
22	...	(-)	Wire, transformer (4" [10.16 cm] long - 16 gauge)
23	M 47761	(-)	Nut, speed
..	AM 34634	(-)	Battery charger, complete (sub. for AM33999)


BATTERY CHARGER (Electric 90, Serial No. 11,705-)

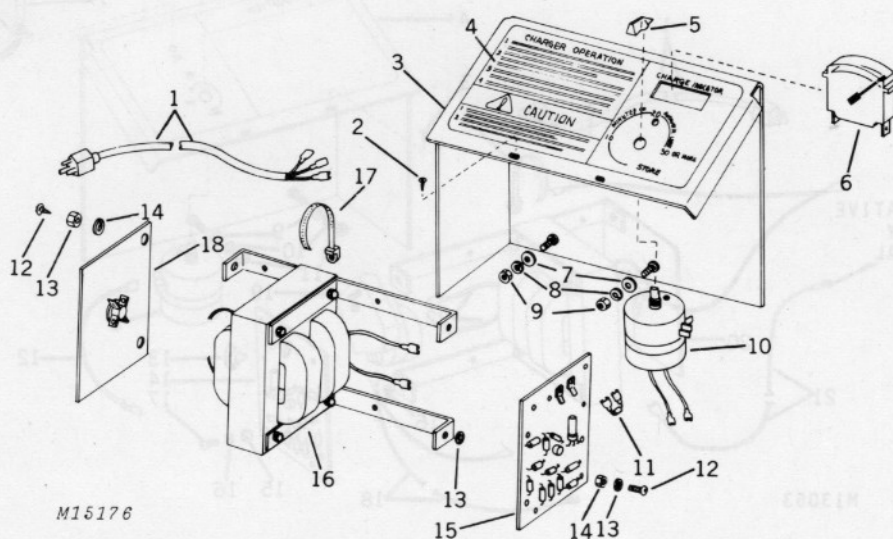

M15176


Key	Part No.	Serial No.	Description
1	AM 34779	(-)	Cord, charger (AC lead)
2	37H 42	(-)	Screw, self-tapping, No. 10 x 3/8" (2 used)
3	...	(-)	Box, charger (sub. AM34935 charger complete)
4	M 48573	(-)	Decal
5	M 46716	(-)	Knob (includes set screw)
6	AM 35455	(-)	Indicator, charge (includes speed clip)
7	24H 1287	(-)	Washer, 9/32" x 5/8" x 0.060" (4 used)
8	12H 302	(-)	Washer, lock, 1/4" (4 used)
9	14H 786	(-)	Nut, 1/4" (4 used)
10	AM 35452	(-)	Timer, charge (includes nut and washer)
11	AM 35454	(-)	Fuse assembly
12	21H 1161	(-)	Screw, machine, No. 10 x 1/2" (4 used)
13	12H 295	(-)	Washer, lock, internal No. 10 (6 used)
14	14H 631	(-)	Nut, No. 10-32 (4 used)
15	AM 35453	(-)	Board, circuit
16	AM 35520	(-)	Transformer assembly
17	M 46940	(-)	Clamp, nylon cable (2 used)
18	AM 35521	(-)	Heat sink and rectifier assembly
..	AM 35522	(-)	Kit, wire (includes all internal wiring harnesses) (not illustrated)
..	AM 34935	(-)	Charger complete

BATTERY CHARGER (Electric 96, Serial No. 30001-)

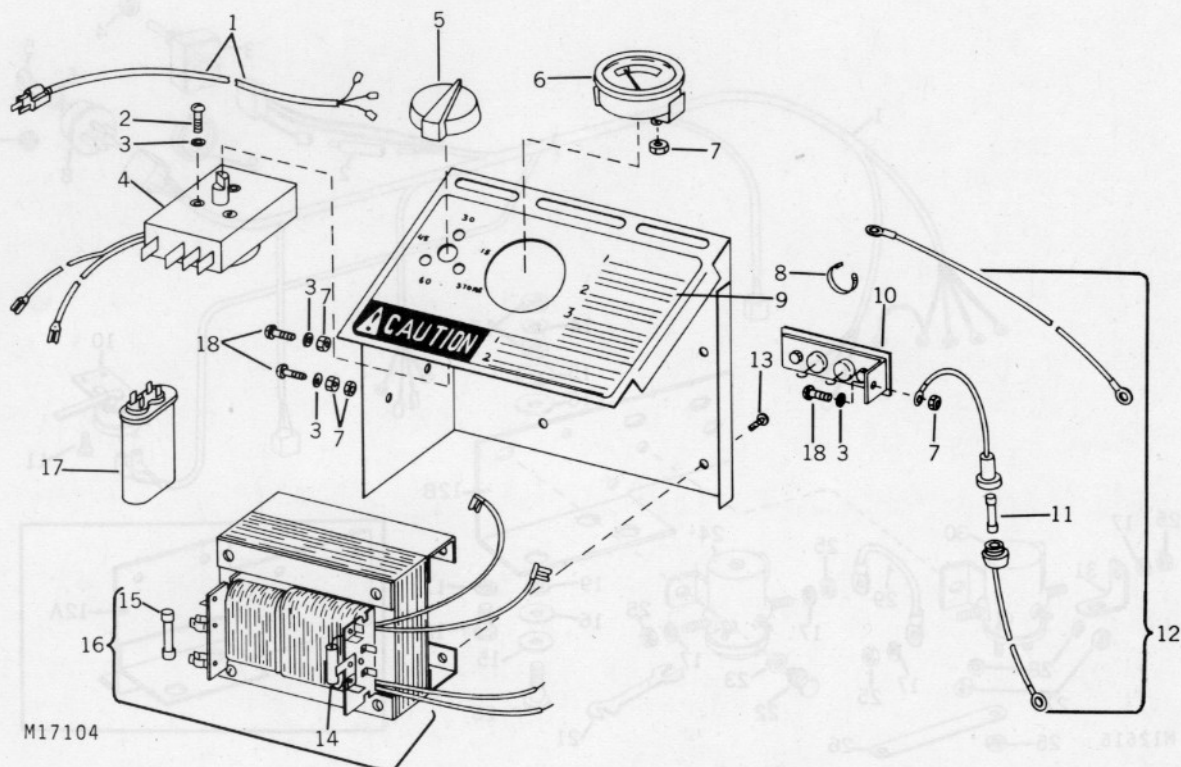


Key	Part No.	Serial No.	Description
1	AM 34779	(-)	Cord, charger (AC lead)
2	21H 1335	(-)	Screw, machine, No. 10 x 5/16" (3 used)
3	12H 295	(-)	Washer, lock, internal-tooth, No. 10 (6 used)
4	AM 36170	(-)	Timer
5	M 80086	(-)	Knob, timer
6	AM 36171	(-)	Ammeter (includes mounting bracket and hardware)
7	14H 631	(-)	Nut, No. 10 (6 used)
8	M 63300	(-)	Strap, tie (2 used)
9	M 49851	(-)	Decal, charger
10	AM 36172	(-)	Heat sink (includes hardware and insulator)
11	AH 84167	(-)	Fuse (30 amp)
12	AM 36169	(-)	Leads, negative and positive
13	37H 42	(-)	Screw, self-tapping, No. 10 x 3/8" (4 used)
14	M 80209	(-)	Resistor, 12 watt
15	AT 28077	(-)	Fuse (10 amp)
16	AM 36174	(-)	Transformer assembly
17	AM 36173	(-)	Condensor
18	21H 1161	(-)	Screw, machine, No. 10 x 1/2" (3 used)
..	AM 35888	(-)	Charger, battery, complete

MAIN WIRING HARNESS **(Serial No. -10,000)**

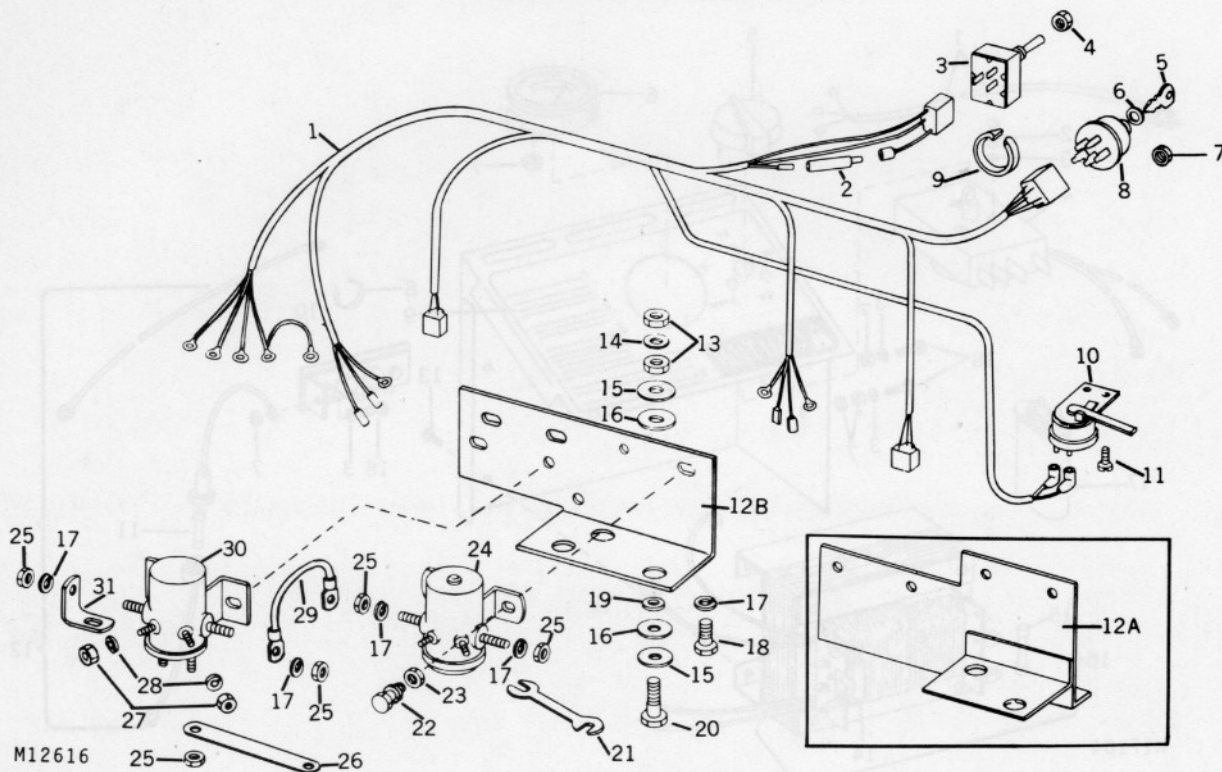

Key	Part No.	Serial No.	Description
1	AM 33993	(-)	Harness, main wiring
2	AM 34039	(-)	Diode
3	AM 33986	(-)	Switch, mower
4	M 46821	(-)	Nut, face
5	M 40718	(-)	Key, ignition
6	24H 1806	(-)	Washer, 37/64" x 7/8" x 0.036"
7	M 46820	(-)	Nut, face
8	AM 33985	(-)	Switch main
9	M 60871	(-)	Strap, tie
10	AM 33994	(-)	Switch, neutral-start
11	37H 42	(-)	Screw, self-tapping, No. 10 x 3/8" (2 used)
12A	AM 33992	(-)	Plate, contactor
12B	M 46792	1501 - 1500	Plate, contactor
13	14H 785	(-)	Nut, 5/16" (4 used)
14	24H 1136	(-)	Washer, 11/32" x 11/16" x 0.060" (2 used)
15	24H 1224	(-)	Washer, 11/32" x 1" x 0.060" (4 used)
16	M 41394	(-)	Washer, fiber, 11/32" x 1" x 0.060" (4 used)
17	12H 303	(-)	Washer, lock, 5/16" (5 used)
18	19H 1813	(-)	Screw, cap, 5/16" x 5/8" (3 used)
19	M 41393	(-)	Washer, fiber, 11/32" x 41/64" x 0.060" (2 used)
20	19H 1905	(-)	Screw, cap, 5/16" x 1" (2 used)
21	M 46427	(-)	Fuse
22	19H 1227	(-)	Screw, cap, 1/4" x 1/2" (4 used)
	12H 302	(-)	Washer, lock, 1/4" (4 used)
23	14H 786	(-)	Nut, 1/4" (2 used)
24	AM 33988	(-)	Solenoid, main
25	14H 882	(-)	Nut, jam, 5/16" UNF (5 used)
26	M 46426	(-)	Resistor, mower
27	14H 631	(-)	Nut, 3/16"
28	12H 246	(-)	Washer, lock, No. 10
29	AM 30768	(-)	Cable, jumper (sub. for M46428)
30	AM 33989	(-)	Solenoid, mower
31	M 46429	(-)	Resistor, jumper
..	AM 34175	(-)	Kit, remote electric receptacle


MAIN WIRING HARNESS **(Serial No. 10,001-11,704)**

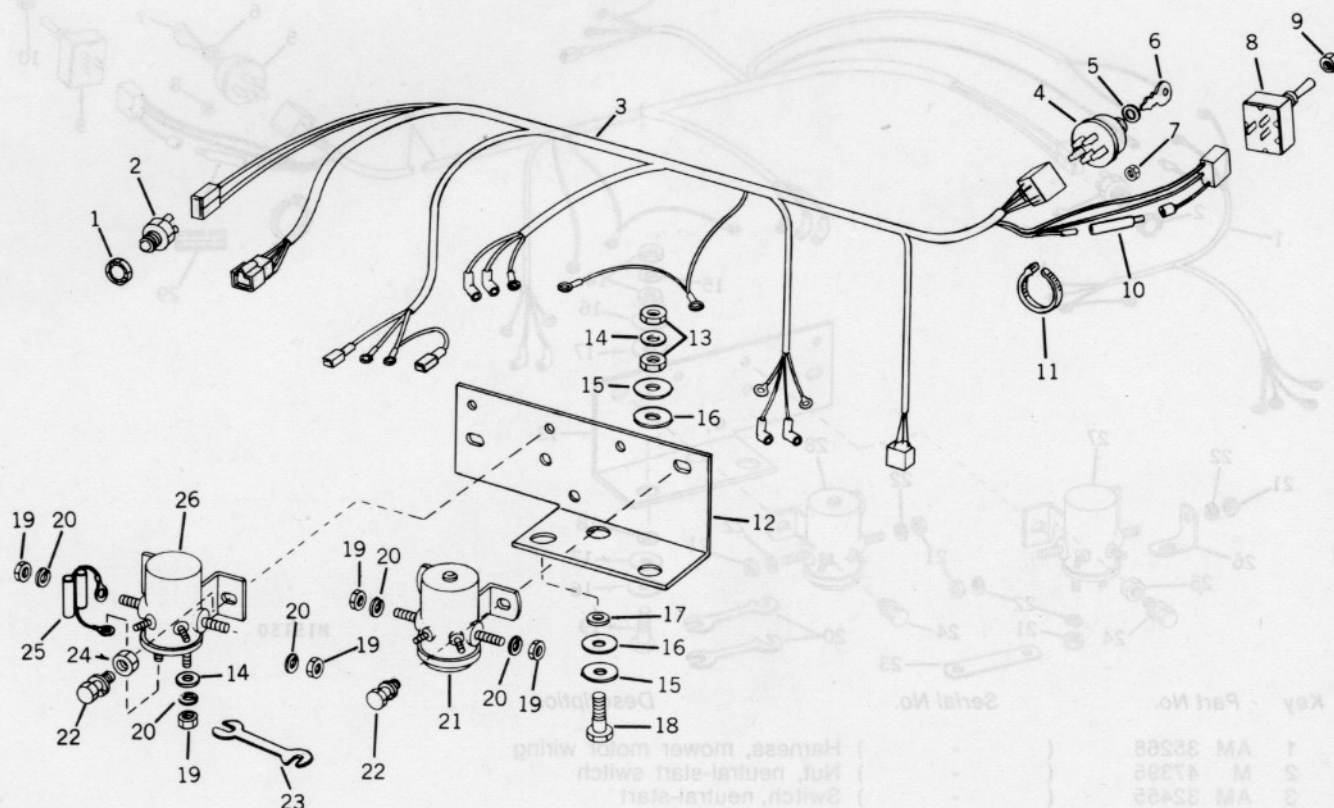

M12617


Key	Part No.	Serial No.	Description
1	M 47395	(-)	Nut, neutral-start switch
2	AM 32455	(-)	Switch, neutral-start
3	AM 34657	(-)	Harness, main wiring
4	AM 33985	(-)	Switch, main
5	24H 1806	(-)	Washer, 37/64" x 7/8" x 0.036"
6	M 40718	(-)	Key, ignition
7	M 46820	(-)	Nut, face, 9/16-24
8	AM 33986	(-)	Switch, PTO
9	M 46821	(-)	Nut, face, 1/2-28
10	AM 34039	(-)	Diode
11	M 60871	(-)	Strap, tie
12	M 46792	(-)	Bracket, contactor
13	14H 785	(-)	Nut, 5/16" (2 used)
14	24H 1136	(-)	Washer, 11/32" x 11/16" x 0.060" (2 used)
15	24H 1224	(-)	Washer, 11/32" x 1" x 0.060" (2 used)
16	M 41394	(-)	Washer, fiber, 11/32" x 1" x 0.060" (2 used)
17	M 41393	(-)	Washer, fiber, 11/32" x 41/64" x 0.060"
18	19H 1905	(-)	Bolt, hex, head, 5/16" x 1"
19	14H 882	(-)	Nut, jam, 5/16" (6 used)
20	12H 303	(-)	Washer, lock, 5/16" (6 used)
21	AM 33988	(-)	Solenoid, main
22	19H 1227	(-)	Bolt, hex, head, 1/4" x 1/2" (6 used)
	12H 302	(-)	Washer, lock, 1/4" (6 used)
23	M 46427	(-)	Fuse
24	14H 786	(-)	Nut, 1/4" (3 used)
25	AM 34913	(-)	Resistor
26	AM 34575	(-)	Solenoid, mower
..	AM 34175	(-)	Kit, remote electric receptacle
1	AM 35039	(-)	Kit, fuse

MAIN WIRING HARNESS **(Serial No. 11,705-)**

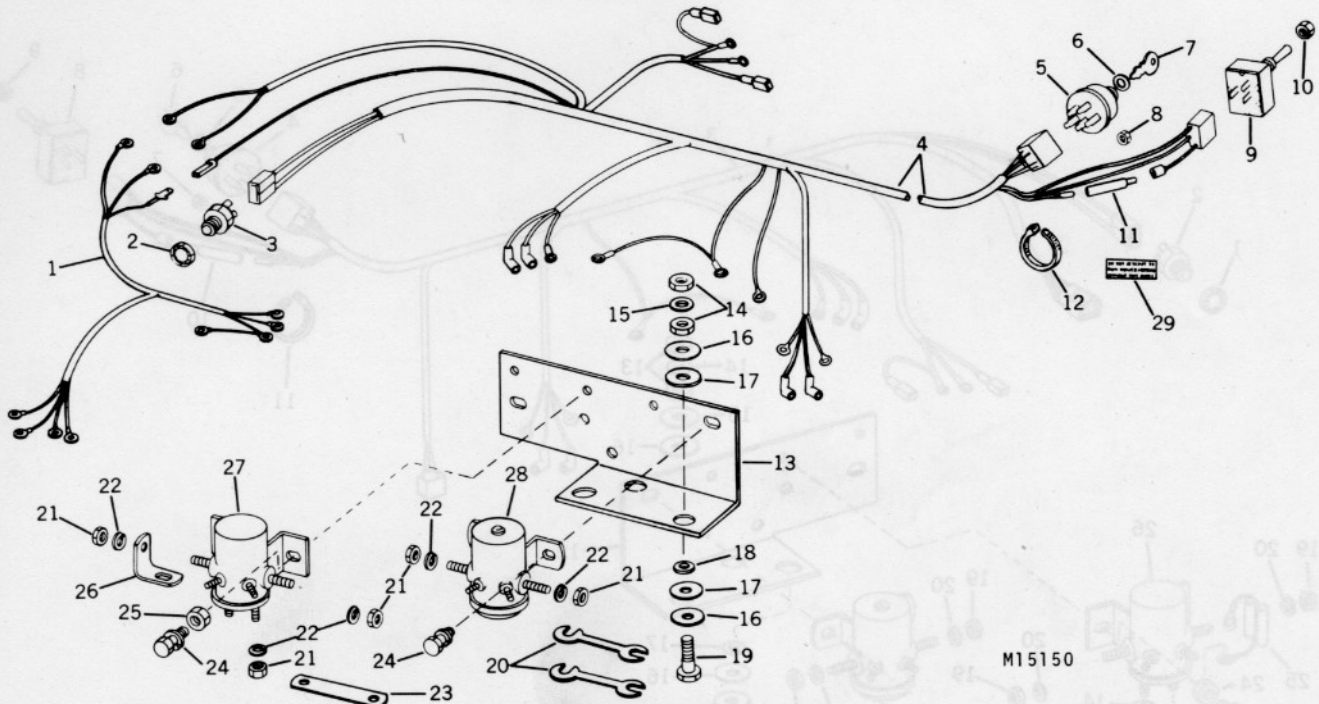

Key	Part No.	Serial No.	Description
1	AM 35268	(-)	Harness, mower motor wiring
2	M 47395	(-)	Nut, neutral-start switch
3	AM 32455	(-)	Switch, neutral-start
4	AM 35269	(-)	Harness, main wiring
5	AM 33985	(-)	Switch, main
6	24H 1806	(-)	Washer, 37/64" x 7/8" x 0.036"
7	M 40718	(-)	Key, ignition
8	M 46820	(-)	Nut, face, 9/16-24
9	AM 35267	(-)	Switch, PTO
10	M 46821	(-)	Nut, face, 1/2-28
11	AM 34039	(-)	Diode
12	M 60871	(-)	Strap, tie
13	M 48414	(-)	Bracket, contactor
14	14H 785	(-)	Nut, 5/16" (5 used)
15	24H 1136	(-)	Washer, 11/32" x 11/16" x 0.060" (3 used)
16	24H 1224	(-)	Washer, 11/32" x 1" x 0.060" (6 used)
17	M 41394	(-)	Washer, fiber, 11/32" x 1" x 0.060" (6 used)
18	M 41393	(-)	Washer, fiber, 11/32" x 41/64" x 0.060" (3 used)
19	19H 1905	(-)	Screw, cap, 5/16" x 1" (3 used)
20	M 46427	(-)	Fuse, (2 used)
21	14H 882	(-)	Nut, jam, 5/16" (6 used)
22	12H 303	(-)	Washer, lock, 5/16" (6 used)
23	M 46426	(-)	Resistor, mower
24	19H 1227	(-)	Screw, cap, 1/4" x 1/2" (5 used)
25	12H 302	(-)	Washer, lock, 1/4" (5 used)
26	14H 786	(-)	Nut, 1/4" (3 used)
27	M 47224	(-)	Resistor, jumper
28	AM 34575	(-)	Solenoid, mower
29	AM 33988	(-)	Solenoid, main
..	M 48401	(-)	Decal, diode
..	AM 34175	(-)	Kit, remote electric receptacle
..	AM 35039	(-)	Kit, fuse


TRACTION MOTOR

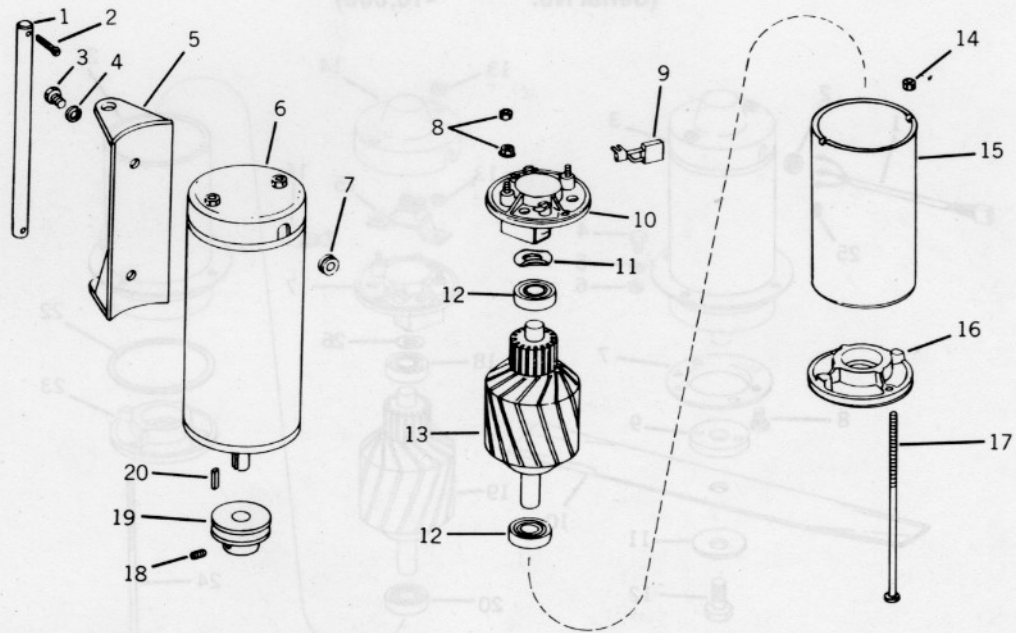

M12618

Key	Part No.	Serial No.	Description
1	M 46441	(-)	Pin, traction motor pivot
2	11H 206	(-)	Pin, cotter, 3/32" x 3/4" (2 used)
3	19H 2020	(-)	Screw, cap, 5/16" x 1/2" (2 used)
4	12H 303	(-)	Washer, lock, 5/16" (2 used)
5	AM 33905	(-)	Bracket, traction motor pivot
6	AM 33907	(- 10000)	Motor, traction
7	AM 34576	(10001 -)	Motor, traction
8	M 46492	(-)	Grommet
9	M 63277	(-)	Nut, lock, 5/16" (4 used)
10	AM 34124	(-)	Brush assembly (2 used)
11	AM 34123	(- 10000)	Cap, commutator end (includes brushes and circuit breaker)
12	AM 34701	(10001 -)	Cap, commutator end (includes brushes and thermostats)
13	M 47399	(-)	Washer, wave
14	JD 8504	(-)	Bearing (2 used)
15	AM 34122	(- 10000)	Armature assembly
16	AM 34700	(10001 -)	Armature assembly (includes bearings and fan)
17	AM 34121	(-)	Nut, 5/16" (2 used)
18	AM 34699	(- 10000)	Shell and magnet assembly
19	M 46624	(10001 -)	Shell and magnet assembly
20	M 46625	(-)	Cap assembly, drive end
21	M 46625	(-)	Bolt, tie (2 used)
22	22H 975	(-)	Screw, socket head set, 5/16" x 5/16" (2 used)
23	M 47389	(-)	Sheave, drive (sub. for M46268)
24	...	(-)	Key, 3/16" x 1" (cut from H64373 key stock)


MOWER MOTORS AND BLADES (Serial No. -10,000)

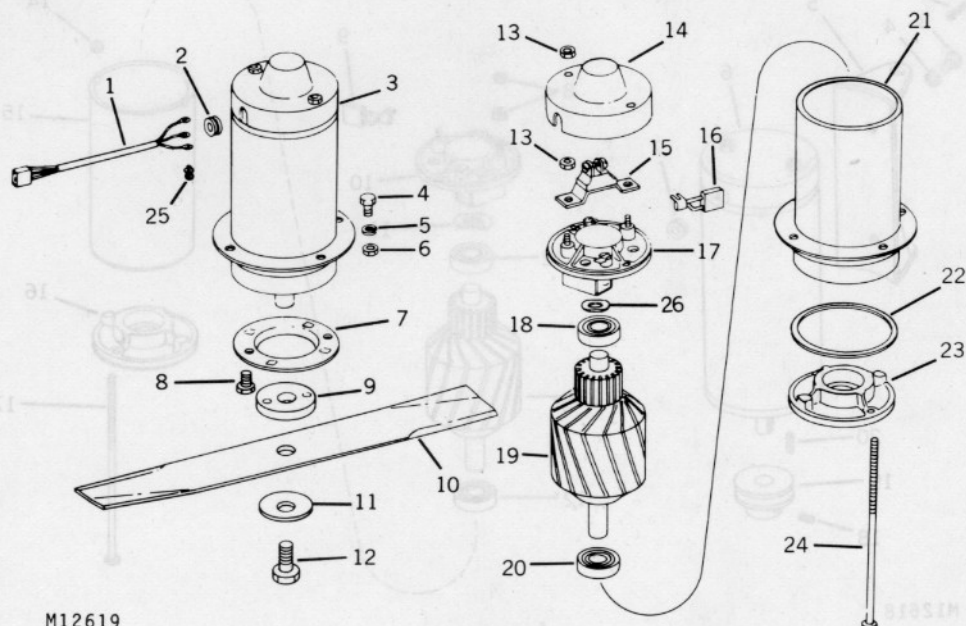

M12619

Key	Part No.	Serial No.	Description
1	AM 34040	(-)	Harness, wiring, R.H.
	AM 34041	(-)	Harness, wiring, L.H.
2	M 46492	(-)	Grommet
3	AM 33910	(-)	Motor, mower
4	19H 1813	(-)	Screw, cap, 5/16" x 5/8" (6 used)
5	12H 303	(-)	Washer, lock, 5/16" (6 used)
6	14H 785	(-)	Nut, lock, 5/16" (6 used)
7	M 47416	(-)	Guard, hub (2 used) (sub. for M46704)
8	19H 1900	(-)	Screw, cap, 5/16" x 3/4" (4 used)
9	M 46270	(-)	Hub
10	AM 34025	(-)	Blade, cutting (pkg. two per carton) (includes two 19H1822)
11	M 40634	(-)	Washer, drive (2 used)
12	19H 1822	(-)	Screw, cap, 7/16" x 1" (2 used)
13	M 40333	(-)	Nut, lock, 1/4" (4 used)
14	M 46628	(-)	Cover, terminal
15	AM 34659	(-)	Circuit breaker (sub. for AM34129)
16	AM 34128	(-)	Brush assembly (2 used)
17	AM 34127	(-)	Cap, commutator end with brushes
18	JD 8504	(-)	Bearing, commutator end
19	AM 34126	(-)	Armature assembly
20	JD 7149	(-)	Bearing, drive end
21	AM 34125	(-)	Shell and magnet assembly
22	M 46627	(-)	Shield, bearing, neoprene
23	M 46626	(-)	Cap assembly, drive end
24	M 46629	(-)	Bolt, tie (2 used)
25	21H 1292	(-)	Screw, machine, No. 8-32 x 1/4"
	12H 315	(-)	Washer, lock, No. 8
26	M 47399	(-)	Washer, wave

MOWER MOTORS AND BLADES (Serial No. 10,001-)

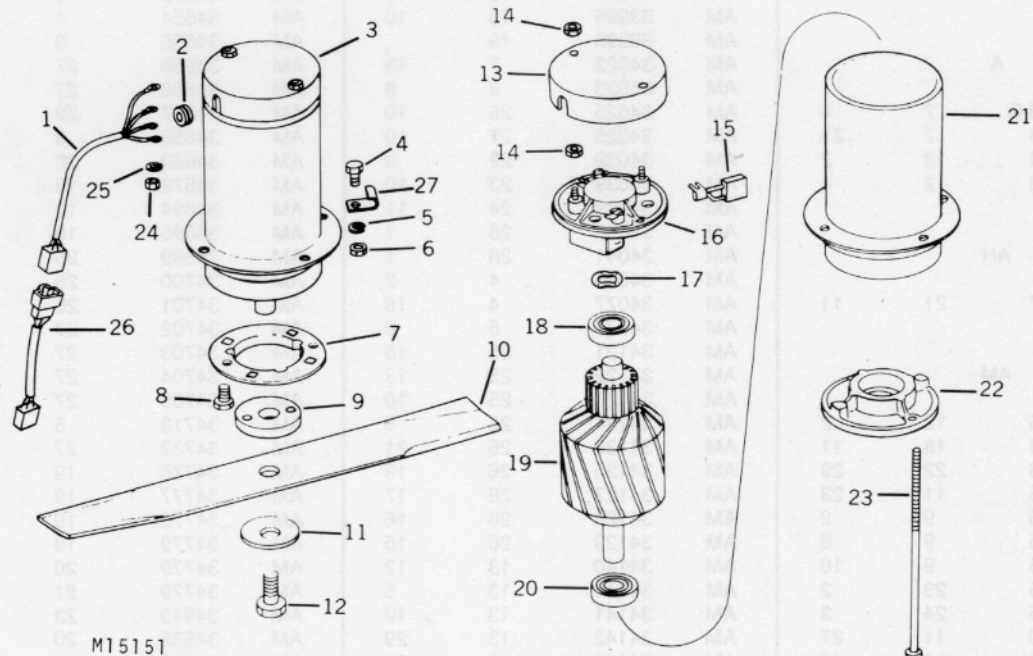

Key	Part No.	Serial No.	Description
1	AM 34732	(10001 - 11704)	Harness, wiring
2	M 46492	(-)	Grommet
3	AM 34656*	(-)	Motor, mower (includes one AM34640 and one AM34641)
4	19H 1813	(-)	Screw, cap, 5/16" x 5/8" (3 used)
5	12H 303	(-)	Washer, lock, 5/16" (3 used)
6	14H 785	(-)	Nut, 5/16" (3 used)
7	M 47416	(-)	Guard, hub
8	19H 1900	(-)	Screw, cap, 5/16" x 3/4" (4 used)
9	M 46270	(-)	Hub
10	AM 34025	(-)	Blade, cutting (two per carton) (includes two 19H1822)
11	M 40634	(-)	Washer, drive
12	19H 1822	(-)	Screw, cap, 7/16" x 1"
13	M 47429	(-)	Cover, terminal
14	M 40333	(-)	Nut, lock (4 used)
15	AM 34705	(-)	Brush assembly (2 used)
16	AM 34704	(-)	Cap, commutator end (includes brushes and thermostat)
17	M 47399	(-)	Washer, wave
18	JD 8504	(-)	Bearing, commutator end
19	AM 34703	(-)	Armature assembly (includes snap ring, hub, and JD7149 bearing)
20	JD 7149	(-)	Bearing
21	AM 34702	(-)	Shell and magnet assembly
22	M 46626	(-)	Cap assembly, drive end
23	M 46629	(-)	Bolt, tie
24	M 64504	(10001 - 11704)	Nut, No. 8-32 (2 used)
	B 14174	(-)	Nut, lock, 1/4" (2 used) (sub. for M63707)
25	12H 290	(-)	Washer, internal-tooth, No. 8 (2 used)
	12H 297	(-)	Washer, internal-tooth, 1/4" (2 used)
26	AM 34640 †	(-)	Harness, wiring, R.H.
	AM 34641 †	(-)	Harness, wiring, L.H.
27	N 10010	(11705 -)	J-clamp (2 used)

* AM34656 may be used on mowers Serial No. (-10000) if AM34640 and AM34641 are used also.

†Used with AM34656 mower motor Serial No. (-10000) only. Discard if used for Serial No. (10001-).

Part No.	Page	Key	Part No.	Page	Key	Part No.	Page	Key
17047 A	5	16	AM 33995	18	1	AM 34641	27	..
17047 A	8	14	AM 33997	18	6	AM 34652	9	9 B
			AM 33998	18	10	AM 34654	4	3
A			AM 33999	19	..	AM 34655	9	2
			AM 34023	7	13	AM 34656	27	3
			AM 34023	8	8	AM 34656	27	..
A 4546 R	7	4	AM 34025	26	10	AM 34657	23	3
A 11318	7	21	AM 34025	27	10	AM 34658	3	1
A 11318	13	2	AM 34039	22	2	AM 34659	26	15
A 15498	12	4	AM 34039	23	10	AM 34672	16	17
			AM 34039	24	11	AM 34694	19	14
			AM 34040	26	1	AM 34695	19	13
AH			AM 34041	26	1	AM 34699	25	15
			AM 34065	4	2	AM 34700	25	13
AH 84167	21	11	AM 34077	4	16	AM 34701	25	10
			AM 34078	5	6	AM 34702	27	21
			AM 34121	25	15	AM 34703	27	19
AM			AM 34122	25	13	AM 34704	27	16
AM 30346	12	2	AM 34123	25	10	AM 34705	27	15
AM 30768	18	11	AM 34124	25	9	AM 34713	5	6
AM 30768	22	29	AM 34125	26	21	AM 34732	27	1
AM 30795	11	23	AM 34126	26	19	AM 34776	19	20
AM 30905	9	2	AM 34127	26	17	AM 34777	19	18
AM 30905	9	6	AM 34128	26	16	AM 34778	19	7
AM 30905	9	10	AM 34129	26	15	AM 34779	19	1
AM 32455	23	2	AM 34140	13	12	AM 34779	20	1
AM 32455	24	3	AM 34141	13	5	AM 34779	21	1
AM 32680	11	27	AM 34141	13	12	AM 34913	23	25
AM 32682	11	17	AM 34142	13	29	AM 34935	20	3
AM 32683	11	15	AM 34143	13	22	AM 34935	20	..
AM 32686	11	11	AM 34144	14	12	AM 34991	12	8 B
AM 32687	11	6	AM 34145	15	22	AM 34993	13	..
AM 32692	11	24	AM 34146	13	25	AM 35039	23	..
AM 32717	11	20	AM 34147	13	9	AM 35039	24	..
AM 33257	5	32	AM 34148	13	8	AM 35067	3	..
AM 33596	12	6	AM 34148	13	9	AM 35175	18	1
AM 33718	17	5	AM 34148	13	25	AM 35267	24	9
AM 33750	3	13	AM 34149	13	14	AM 35268	24	1
AM 33905	25	5	AM 34149	15	16	AM 35269	24	4
AM 33907	25	6	AM 34150	13	3	AM 35274	3	1
AM 33909	16	17	AM 34151	13	21	AM 35452	20	10
AM 33910	26	3	AM 34151	13	22	AM 35453	20	15
AM 33911	17	3	AM 34162	11	3	AM 35454	20	11
AM 33914	3	1	AM 34175	22	..	AM 35455	20	6
AM 33917	4	9	AM 34175	23	..	AM 35520	20	16
AM 33919	11	13	AM 34175	24	..	AM 35521	20	18
AM 33965	18	4	AM 34181	12	8 A	AM 35522	20	..
AM 33966	5	19	AM 34188	16	1	AM 35888	21	..
AM 33966	6	15	AM 34262	4	9	AM 35991	13	..
AM 33967	7	10	AM 34264	17	10 B	AM 36169	21	12
AM 33967	8	5	AM 34346	19	20	AM 36170	21	4
AM 33969	10	9	AM 34347	19	14	AM 36171	21	6
AM 33973	13	..	AM 34348	19	8	AM 36172	21	10
AM 33974	7	22	AM 34349	19	19	AM 36173	21	17
AM 33977	10	16	AM 34351	19	7	AM 36174	21	16
AM 33978	3	11	AM 34352	19	4			
AM 33980	7	23	AM 34353	19	1			
AM 33983	4	3	AM 34354	19	18	AT		
AM 33985	22	8	AM 34522	16	6			
AM 33985	23	4	AM 34532	12	8 A	AT 28077	21	15
AM 33985	24	5	AM 34533	13	..			
AM 33986	22	3	AM 34569	3	33			
AM 33986	23	8	AM 34575	23	26	B		
AM 33988	22	24	AM 34575	24	27			
AM 33988	23	21	AM 34576	25	6	B 14174	27	24
AM 33988	24	28	AM 34619	13	12			
AM 33989	22	30	AM 34620	8	18			
AM 33990	9	9 A	AM 34634	19	4	BM		
AM 33990	9	9 B	AM 34634	19	..			
AM 33991	9	2	AM 34640	27	3	BM 15779	5	..
AM 33992	22	12 A	AM 34640	27	26	BM 15779	7	..
AM 33993	22	1	AM 34640	27	..			
AM 33994	22	10	AM 34641	27	3			
			AM 34641	27	26			

Part No.	Page	Key	Part No.	Page	Key	Part No.	Page	Key
	E		M 40699	12	14	M 46374	6	11
			M 40699	16	5	M 46377	7	20
			M 40718	22	5	M 46379	5	1
E 10417	10	5	M 40718	23	6	M 46380	13	26 A
			M 40718	24	7	M 46382	4	17
	F		M 40719	12	1	M 46383	4	17
			M 40753	10	15	M 46385	3	14
			M 40753	16	14	M 46386	7	25
F 2948 R	10	11	M 40753	16	19	M 46387	5	14
			M 40839	6	25	M 46388	10	17
	H		M 40839	7	19	M 46389	10	18
			M 40839	16	15	M 46390	10	21
H 23197	3	24	M 41001	10	1	M 46391	5	23
H 29175	8	22	M 41026	9	4	M 46394	5	9
H 32811	11	16	M 41028	8	19	M 46398	5	20
H 64373	12	7	M 41028	13	24	M 46398	6	16
H 64373	25	20	M 41029	9	7	M 46416	10	4
			M 41361	11	19	M 46426	22	26
	J		M 41393	3	31	M 46426	24	23
			M 41393	22	19	M 46427	22	21
			M 41393	23	17	M 46427	23	23
			M 41393	24	18	M 46427	24	20
J 16931	5	21	M 41394	3	30	M 46428	22	29
J 16931	6	17	M 41394	22	16	M 46429	22	31
J 16931	10	14	M 41394	23	16	M 46433	3	7
J 16931	16	18	M 41394	24	17	M 46434	9	3
			M 41448	9	6	M 46435	4	5
			M 41522	11	18	M 46436	9	5
			M 41529	11	5	M 46437	3	18
	JD		M 41531	11	5	M 46438	10	10
			M 41552	11	21	M 46439	10	12
JD 5274	4	20	M 41592	6	28	M 46440	3	9
JD 7149	26	20	M 41644	17	8	M 46441	25	1
JD 7149	27	19	M 42228	16	13	M 46442	3	22
JD 7149	27	20	M 44103	16	3	M 46443	16	2
JD 7797	11	14	M 44391	3	24	M 46446	7	6
JD 8504	25	12	M 44391	3	26	M 46447	7	8
JD 8504	26	18	M 44395	4	10	M 46492	3	25
JD 8504	27	18	M 44509	5	18	M 46492	25	7
			M 44509	6	14	M 46492	26	2
			M 44509	7	11	M 46492	27	2
	L		M 44509	8	6	M 46493	10	7
			M 44541	16	12	M 46494	7	24
L 299 T	5	22	M 44606	11	22	M 46519	3	12
L 299 T	6	18	M 44957	8	1	M 46603	4	4
L 1142 C	7	16	M 45030	16	21	M 46624	25	16
L 1142 C	8	11	M 45262	3	8	M 46625	25	17
			M 45262	11	8	M 46626	26	23
			M 45324	14	2	M 46626	27	22
	M		M 45325	14	14	M 46627	26	22
			M 45328	14	1	M 46628	26	14
M 11021	15	3	M 45562	16	9	M 46629	26	24
M 40005	9	1	M 45847	16	20	M 46629	27	23
M 40213	17	1	M 45915	7	12	M 46632	4	5
M 40333	7	3	M 45915	8	7	M 46632	4	6
M 40333	26	13	M 46266	5	28	M 46645	13	12
M 40333	27	14	M 46268	5	5	M 46645	13	20
M 40349	9	8	M 46268	25	19	M 46645	13	22
M 40350	15	4	M 46270	26	9	M 46646	13	12
M 40351	15	5	M 46270	27	9	M 46646	13	19
M 40361	15	13	M 46271	17	10 A	M 46646	13	29
M 40374	13	7	M 46350	4	1	M 46647	13	4
M 40378	14	4	M 46351	19	5	M 46647	13	12
M 40378	15	24	M 46352	18	2	M 46648	13	27
M 40461	16	10	M 46352	18	3	M 46648	13	29
M 40514	11	12	M 46353	4	16	M 46649	14	11
M 40634	26	11	M 46357	18	2	M 46649	14	12
M 40634	27	11	M 46359	7	5	M 46650	14	3
M 40636	12	9	M 46366	5	17	M 46651	14	10
M 40636	13	..	M 46366	6	24	M 46652	14	6
M 40659	17	7	M 46366	7	18	M 46653	14	13
M 40691	5	24	M 46366	16	16 A	M 46654	15	21
M 40691	6	20	M 46370	10	8	M 46654	15	22
M 40699	8	23	M 46374	5	11	M 46655	15	12

PC-1279-(May-75) Litho in U.S.A.

